


Arcade-C-2P组装图

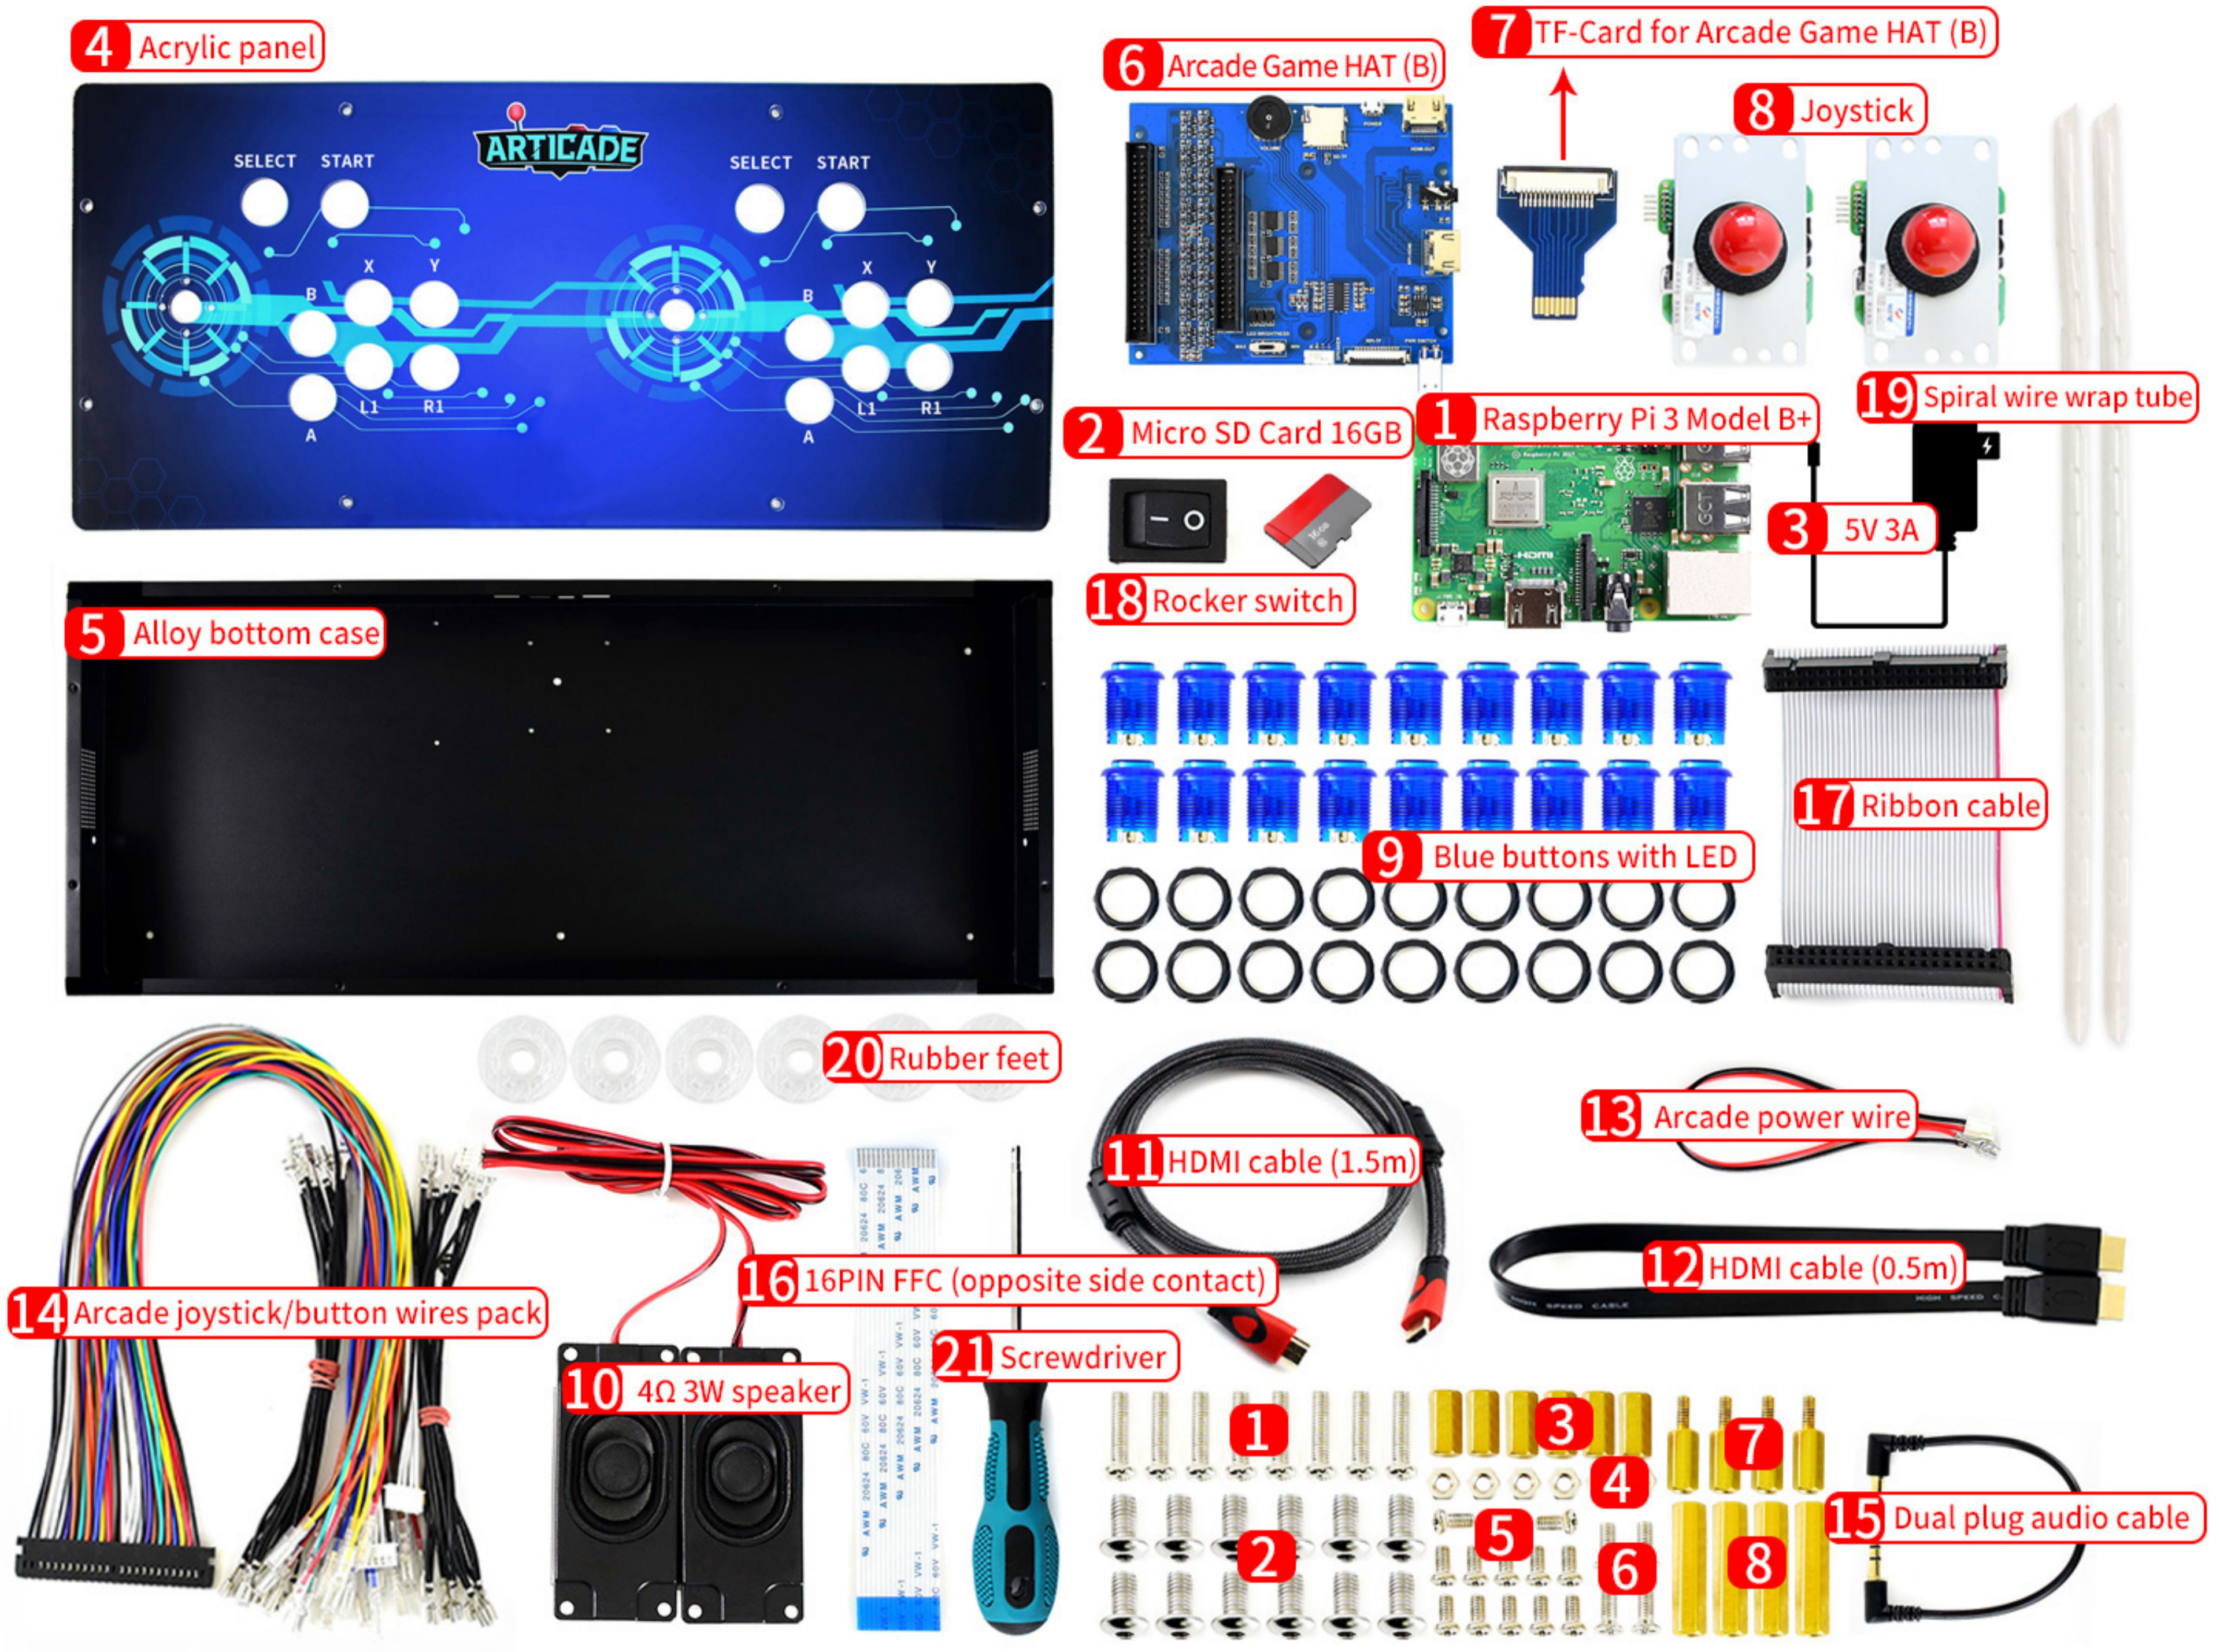


Screws Pack

- | | |
|-----------------------------|-------------------------|
| 1 Screw PM3*12 | 2 Screw M4*8 |
| 3 Standoff M2.5*10 | 4 Nut M4 |
| 5 Screw M2.5*5 | 6 Screw M3*8 |
| 7 Standoff M2.5*10+6 | 8 Standoff M3*20 |

Firstly remove the protective film



1. Mount blue buttons on Acrylic panel

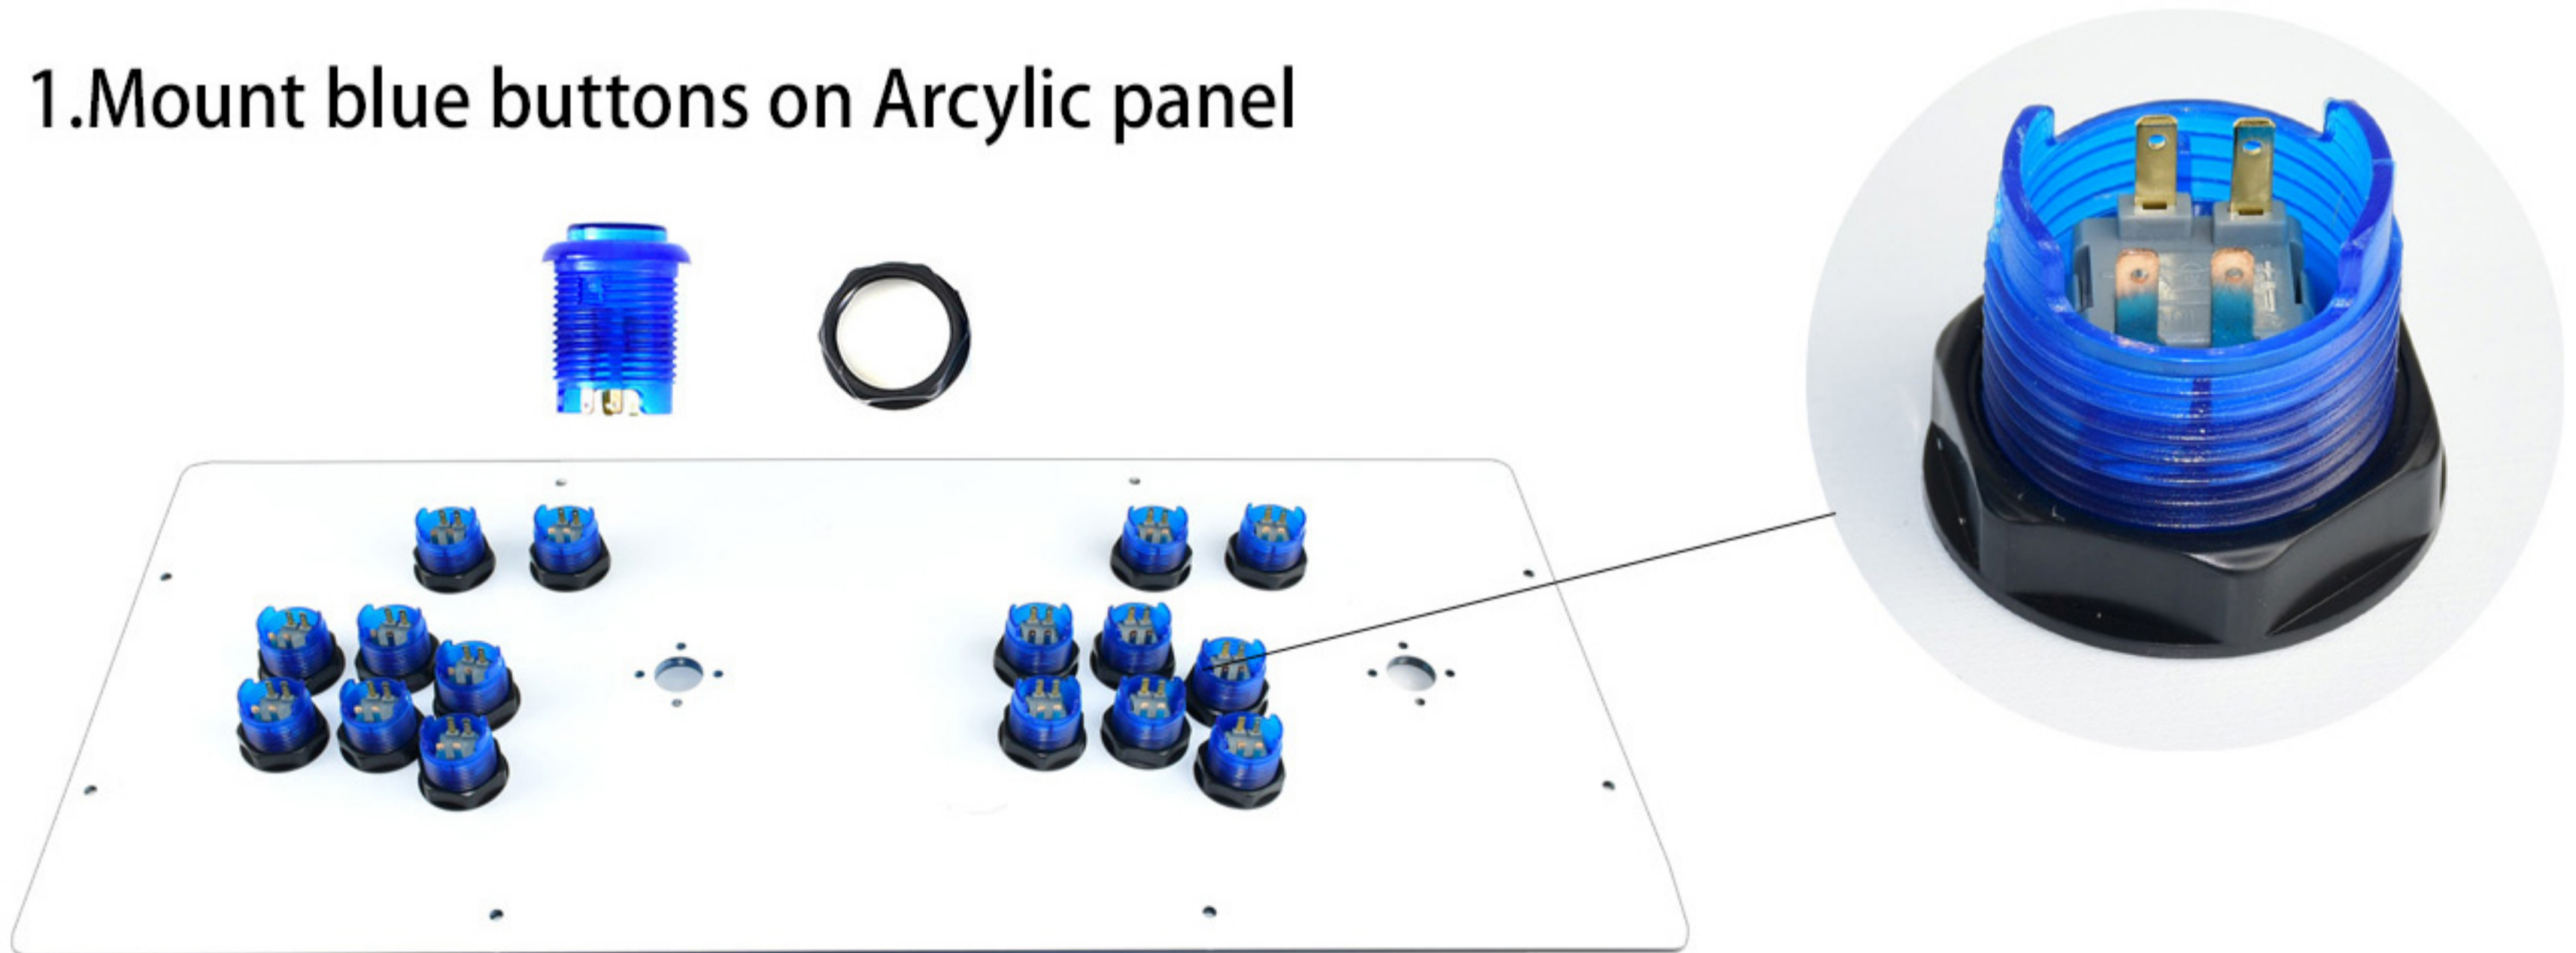



2. Remove screws from joysticks, then fix joysticks on Acrylic panel by Screw 1



3. To easily connect buttons and joystick, you can first insert the cable to Arcade Game HAT (B)

Note: Make sure that you connect the cable correctly, otherwise, LED of buttons cannot work

Align the cable carefully

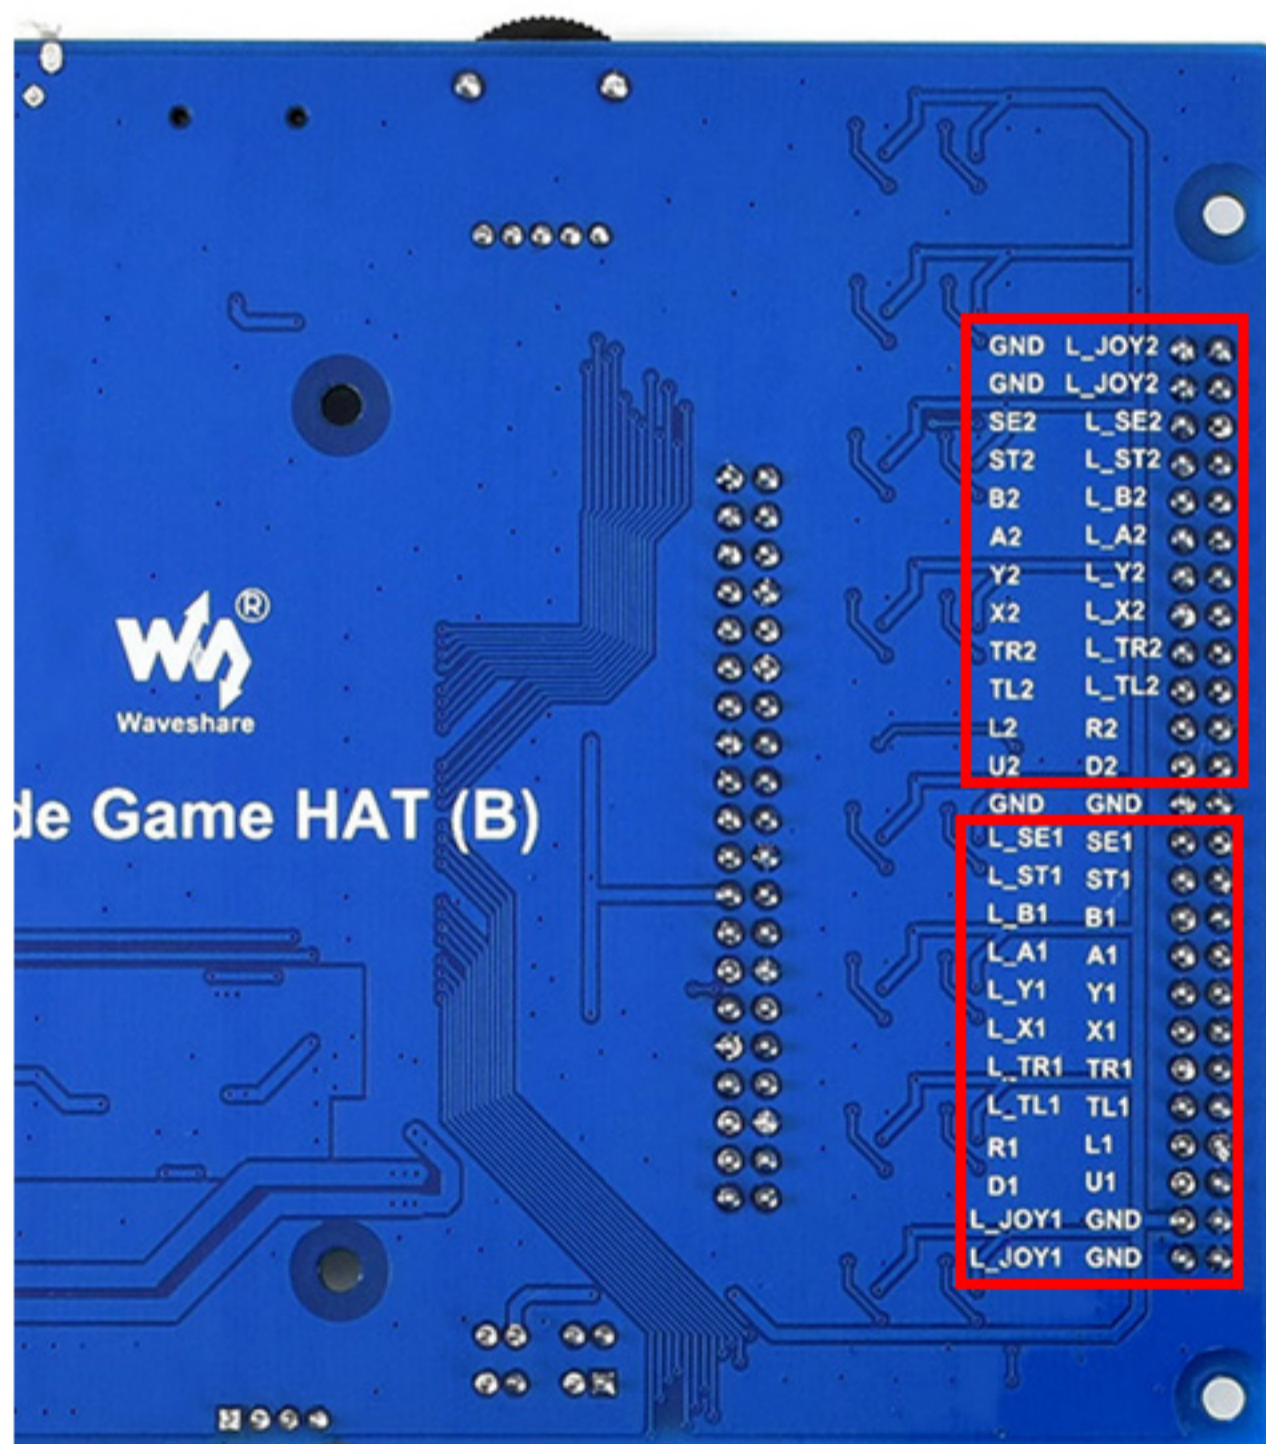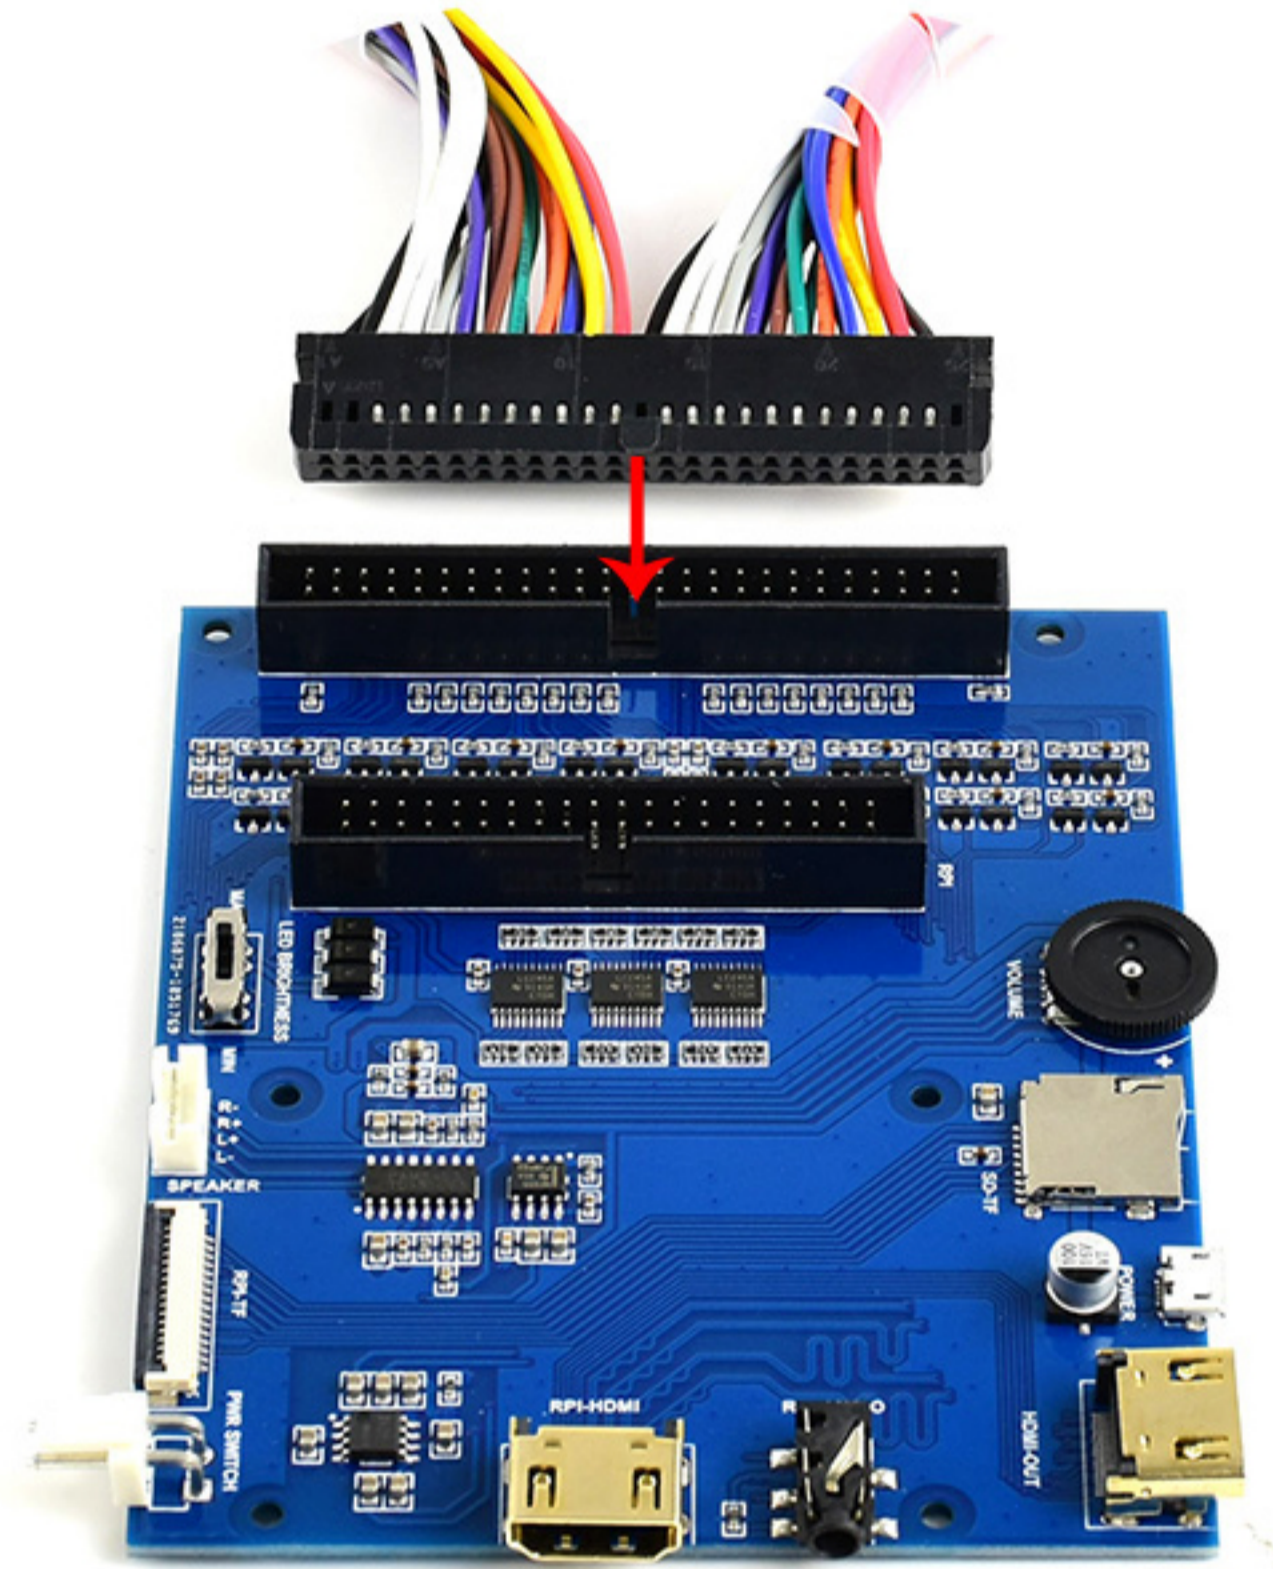


Area 1 and Area 2 of Arcade Game HAT (B) are related to Controller 1 and Controller 2 respectively

2


1



Connect black wire

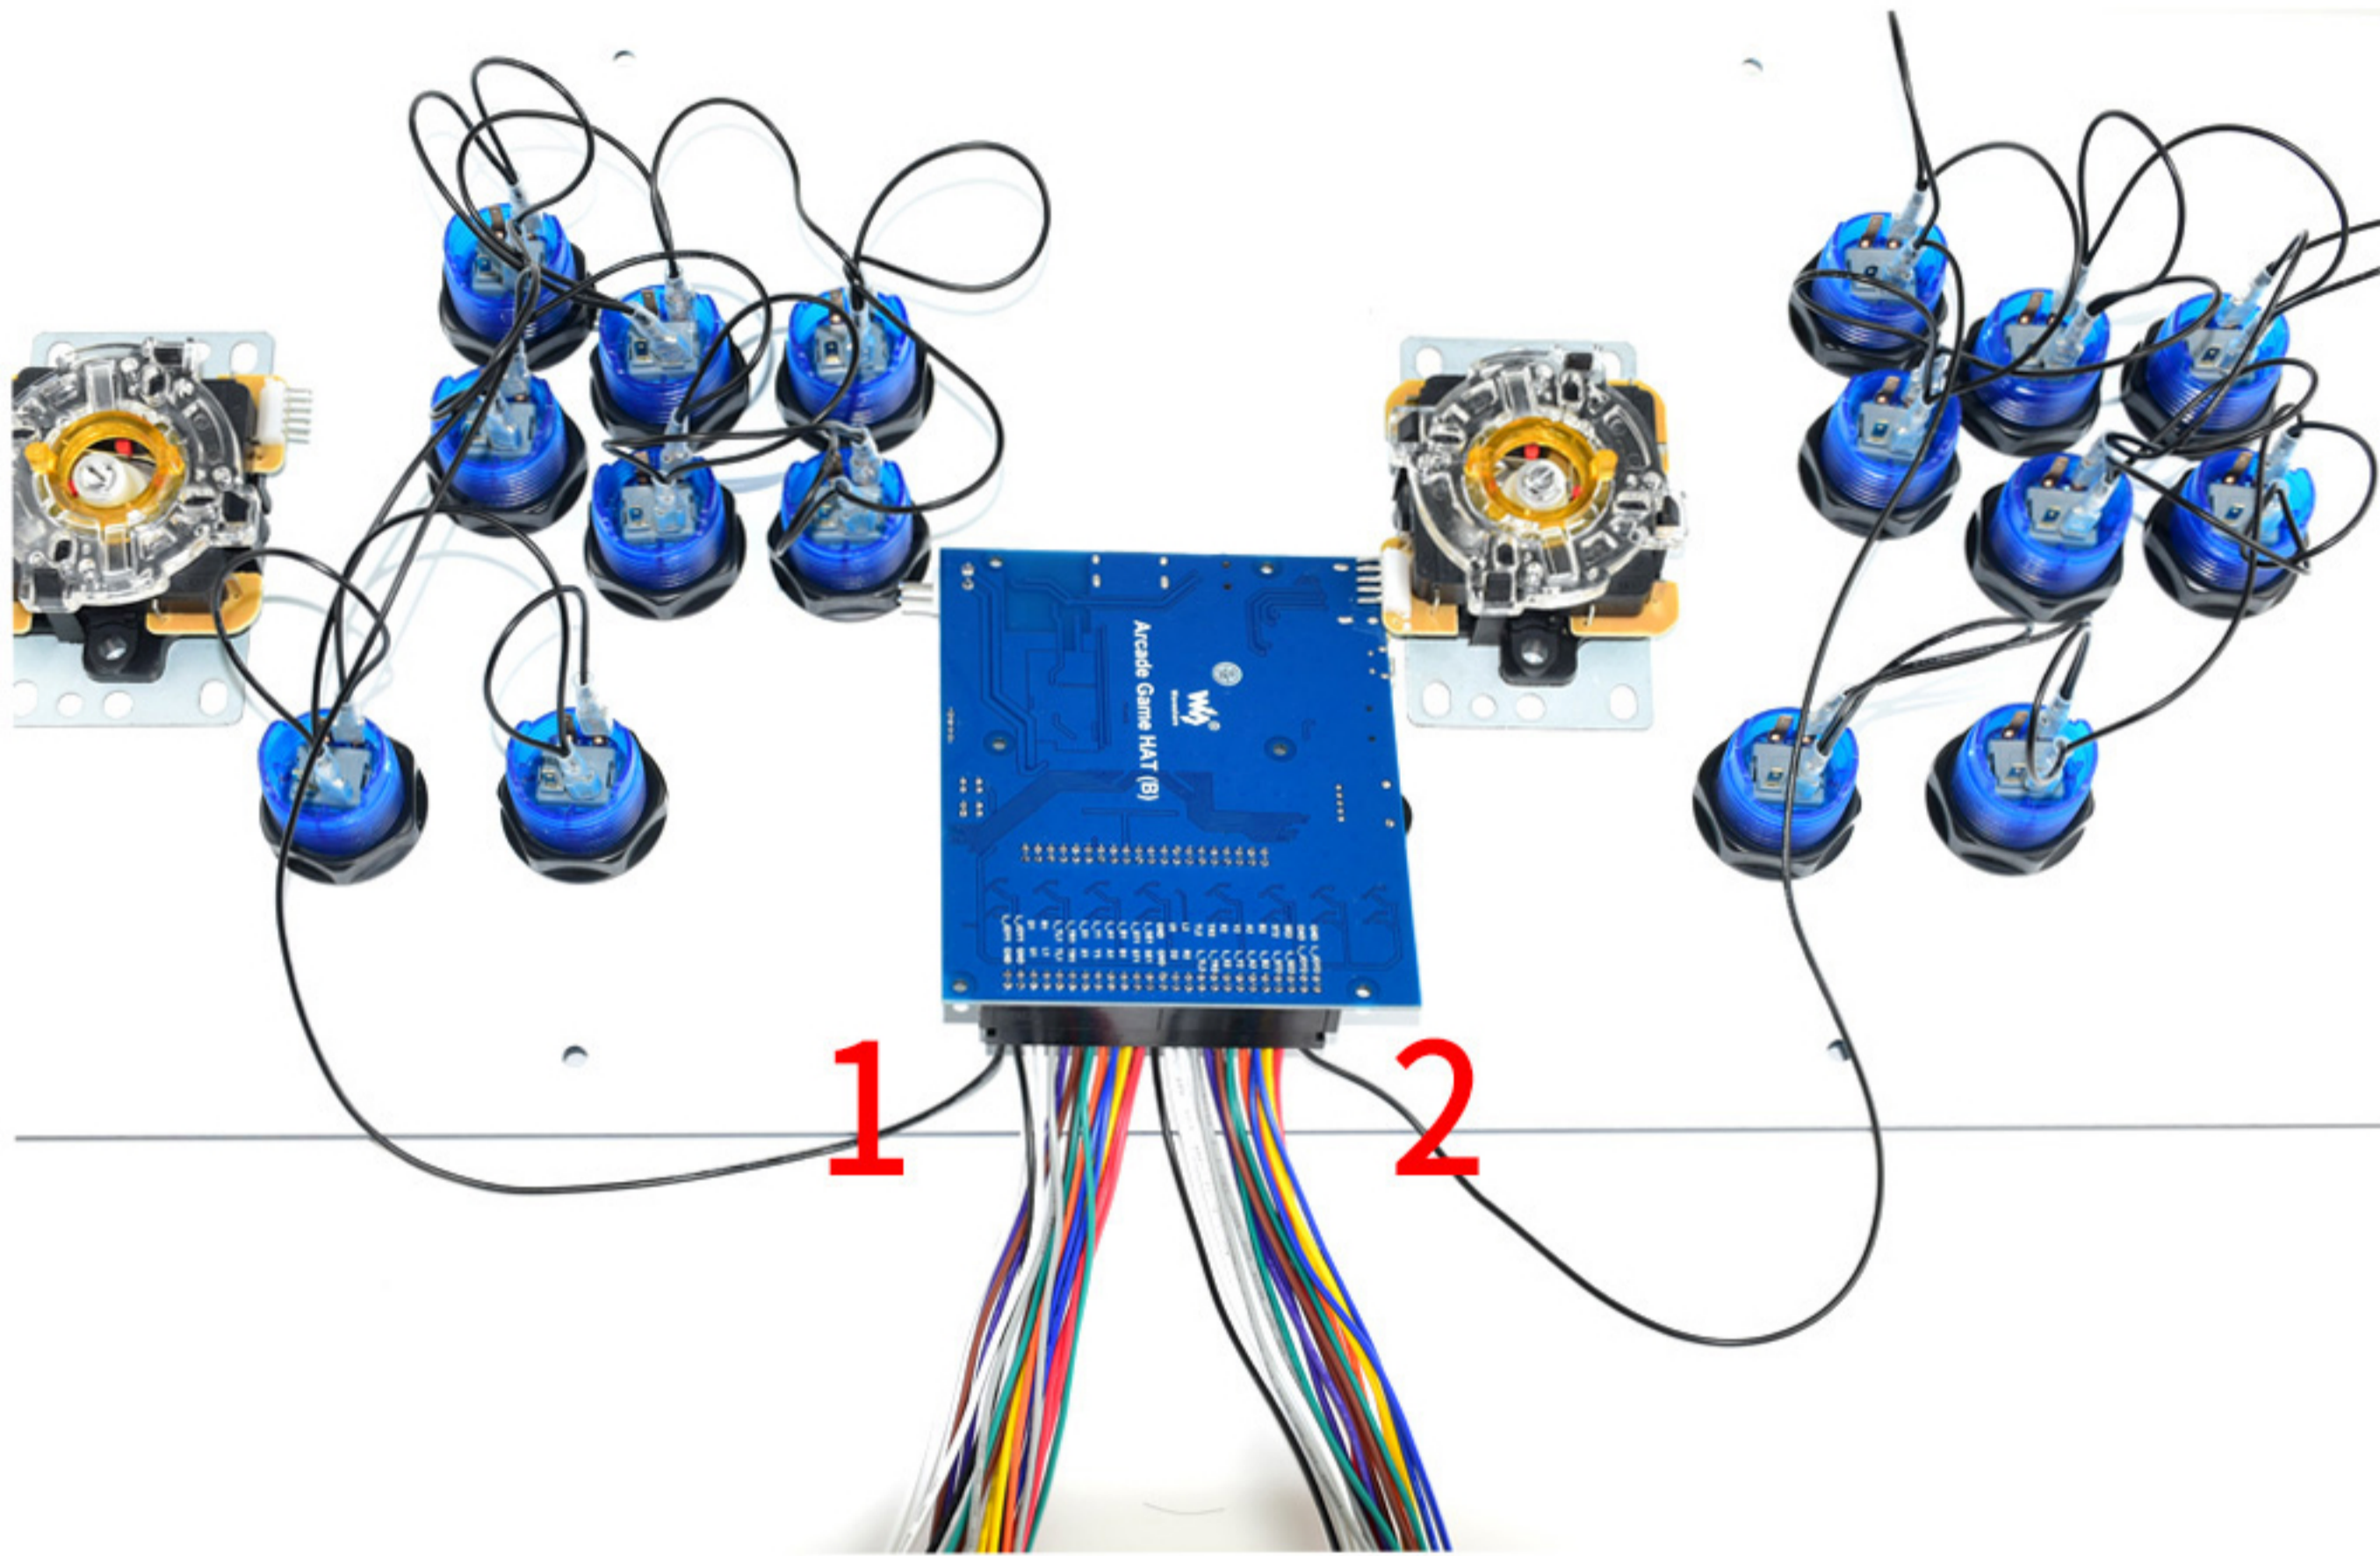


Details of connecting black wires

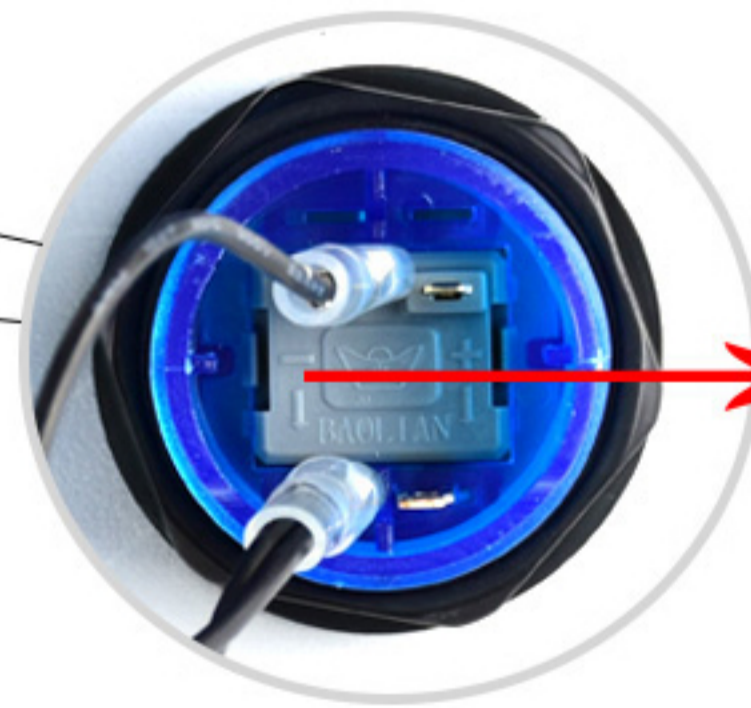



Connect black wires to negative symbol side of buttons. Firstly connect the header (black wires)

Note that you should connect it to negative side, otherwise LED cannot work. There are two bunches of black wire, related to two controllers


Connect colored wires

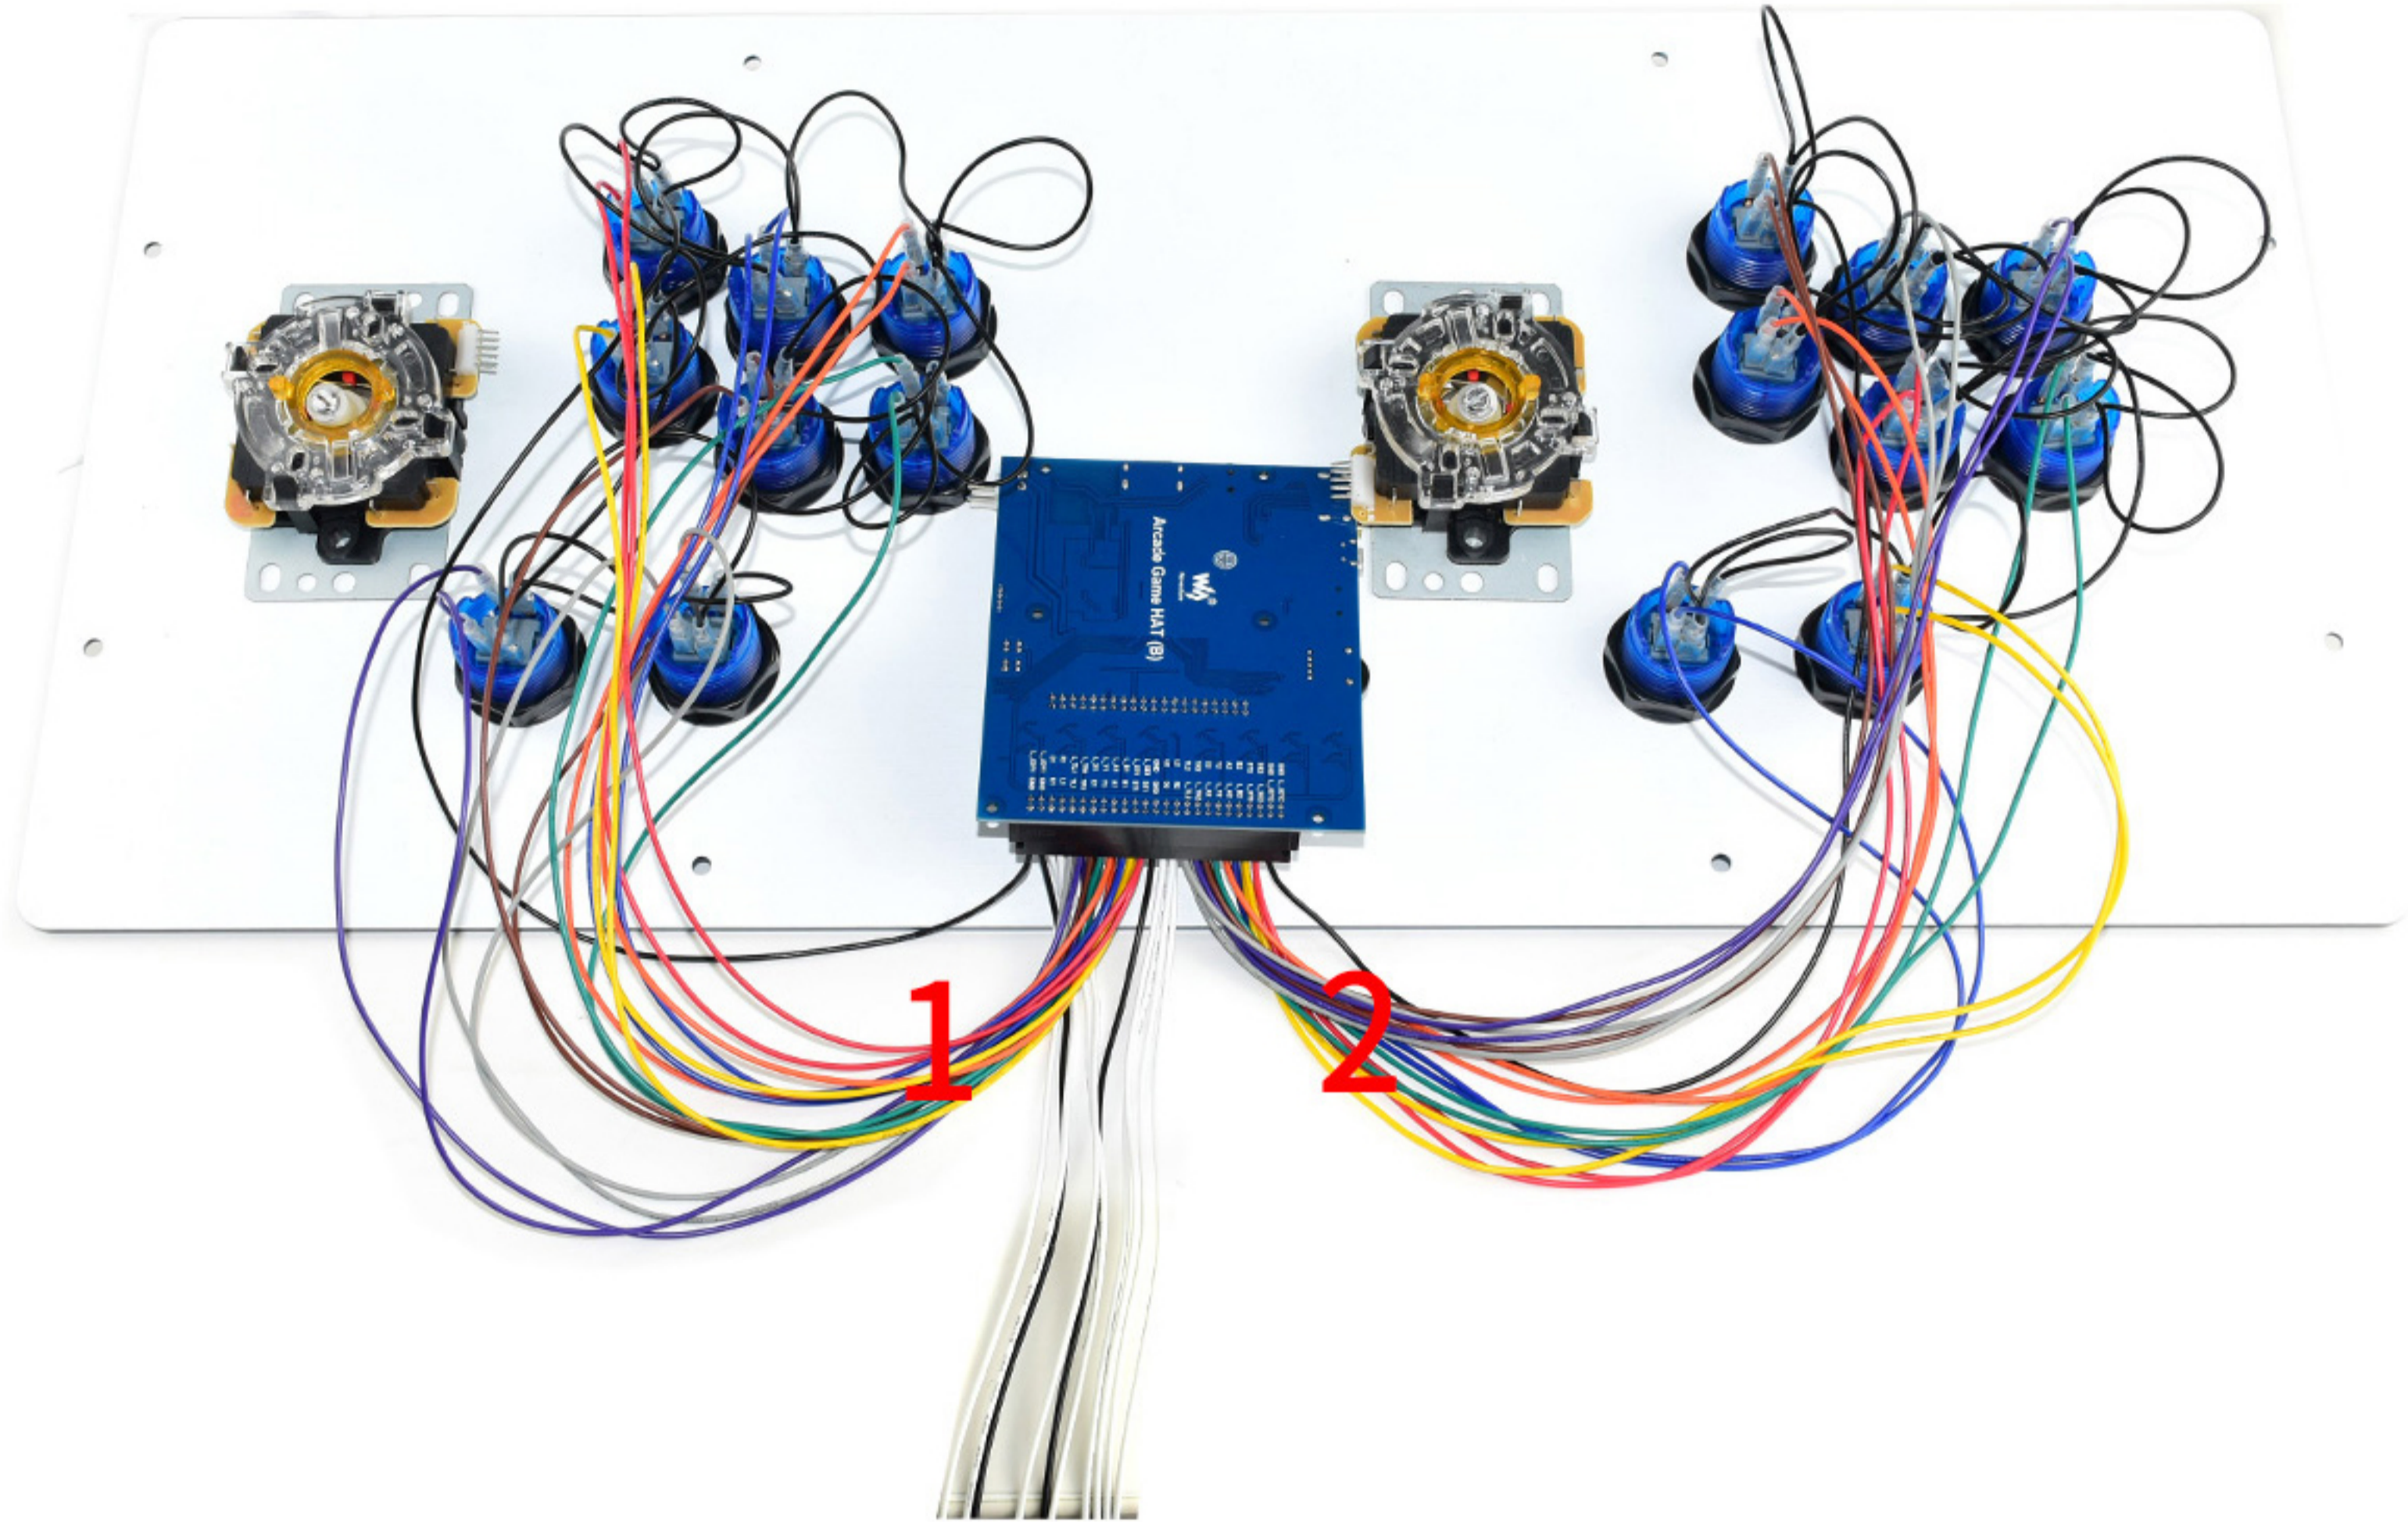

Area 1 and Area 2 are related to Controller 1 and Controller 2 respectively

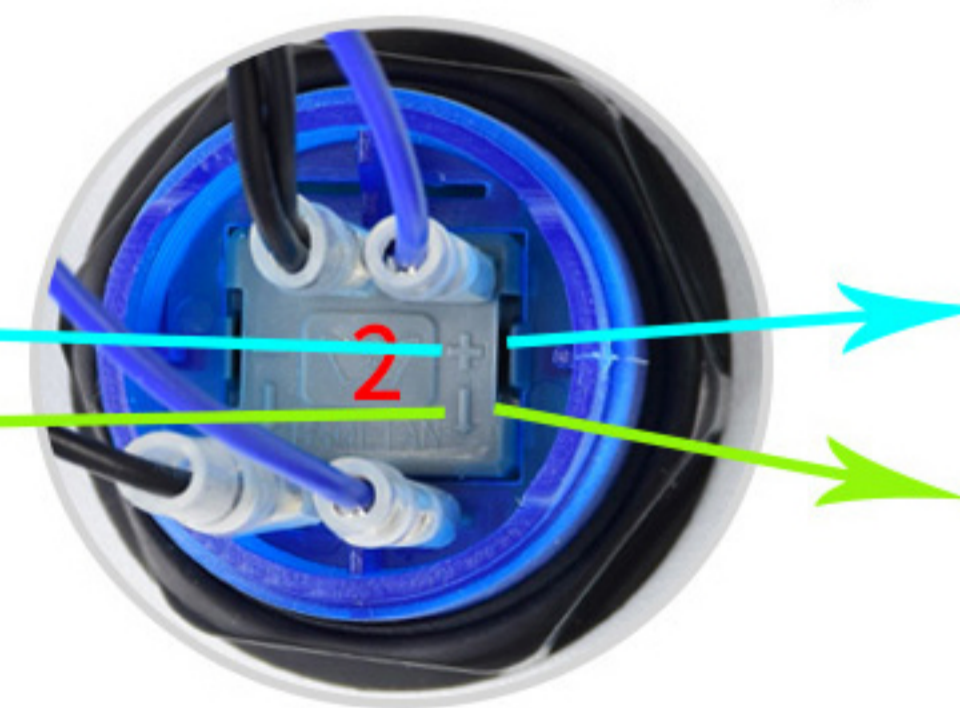
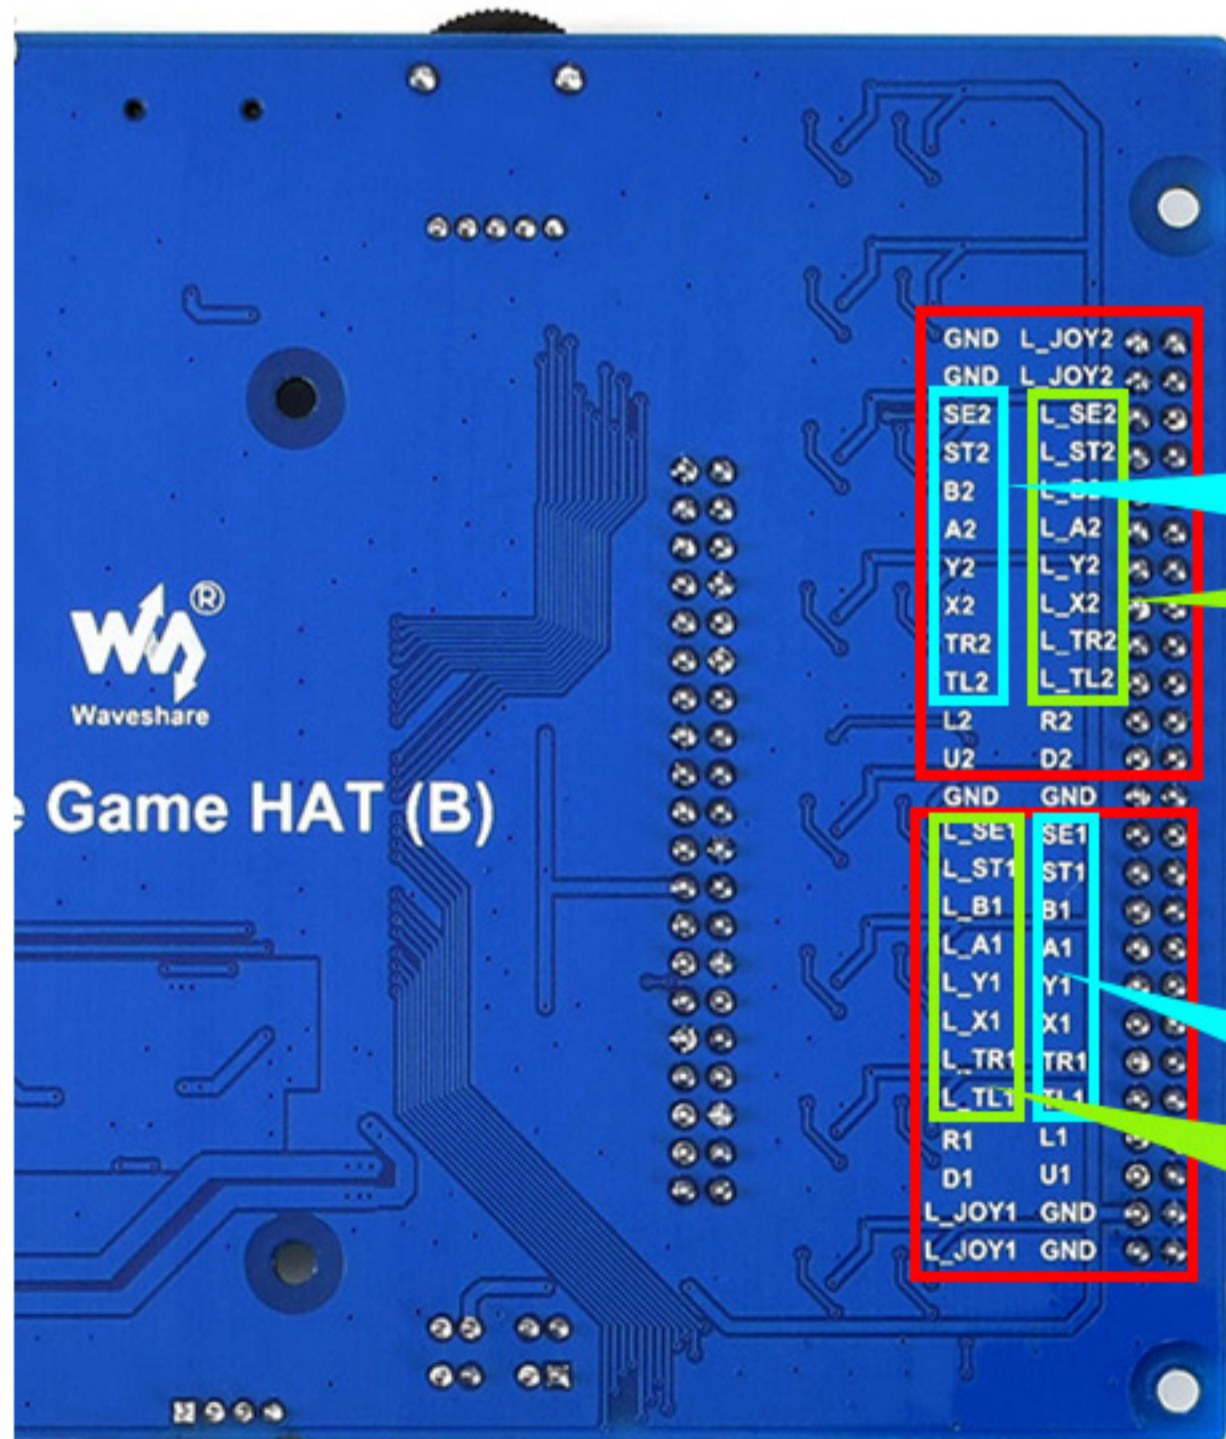


- Connect wires of blue area to "+" pins
- Connect wires of blue area to "↓" pins

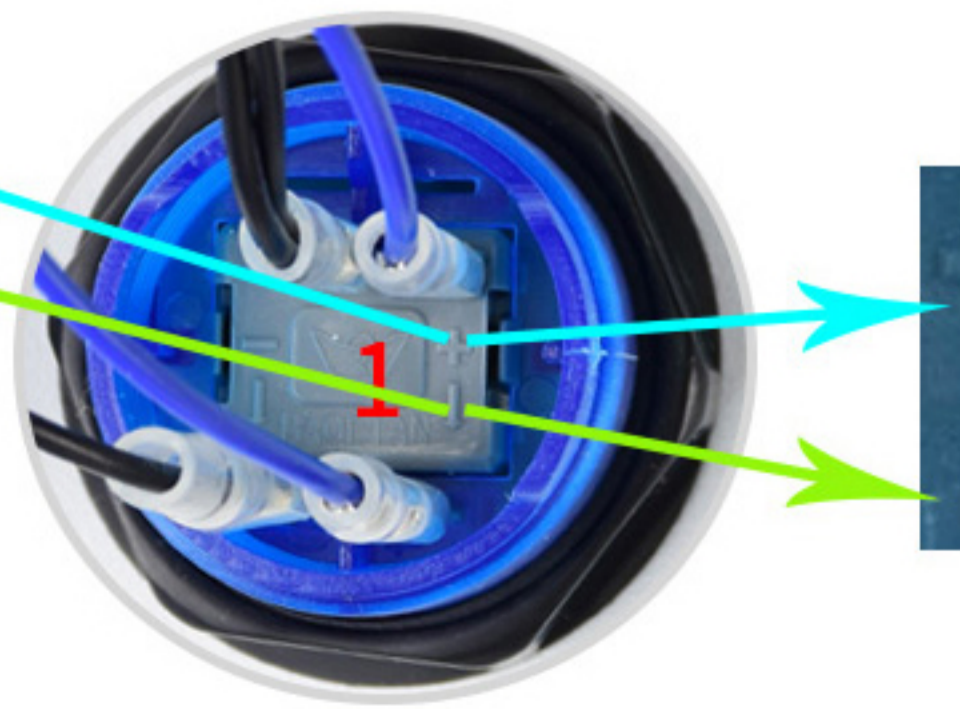


- Connect wires of blue area to "+" pins
- Connect wires of blue area to "↓" pins

Connect joysticks

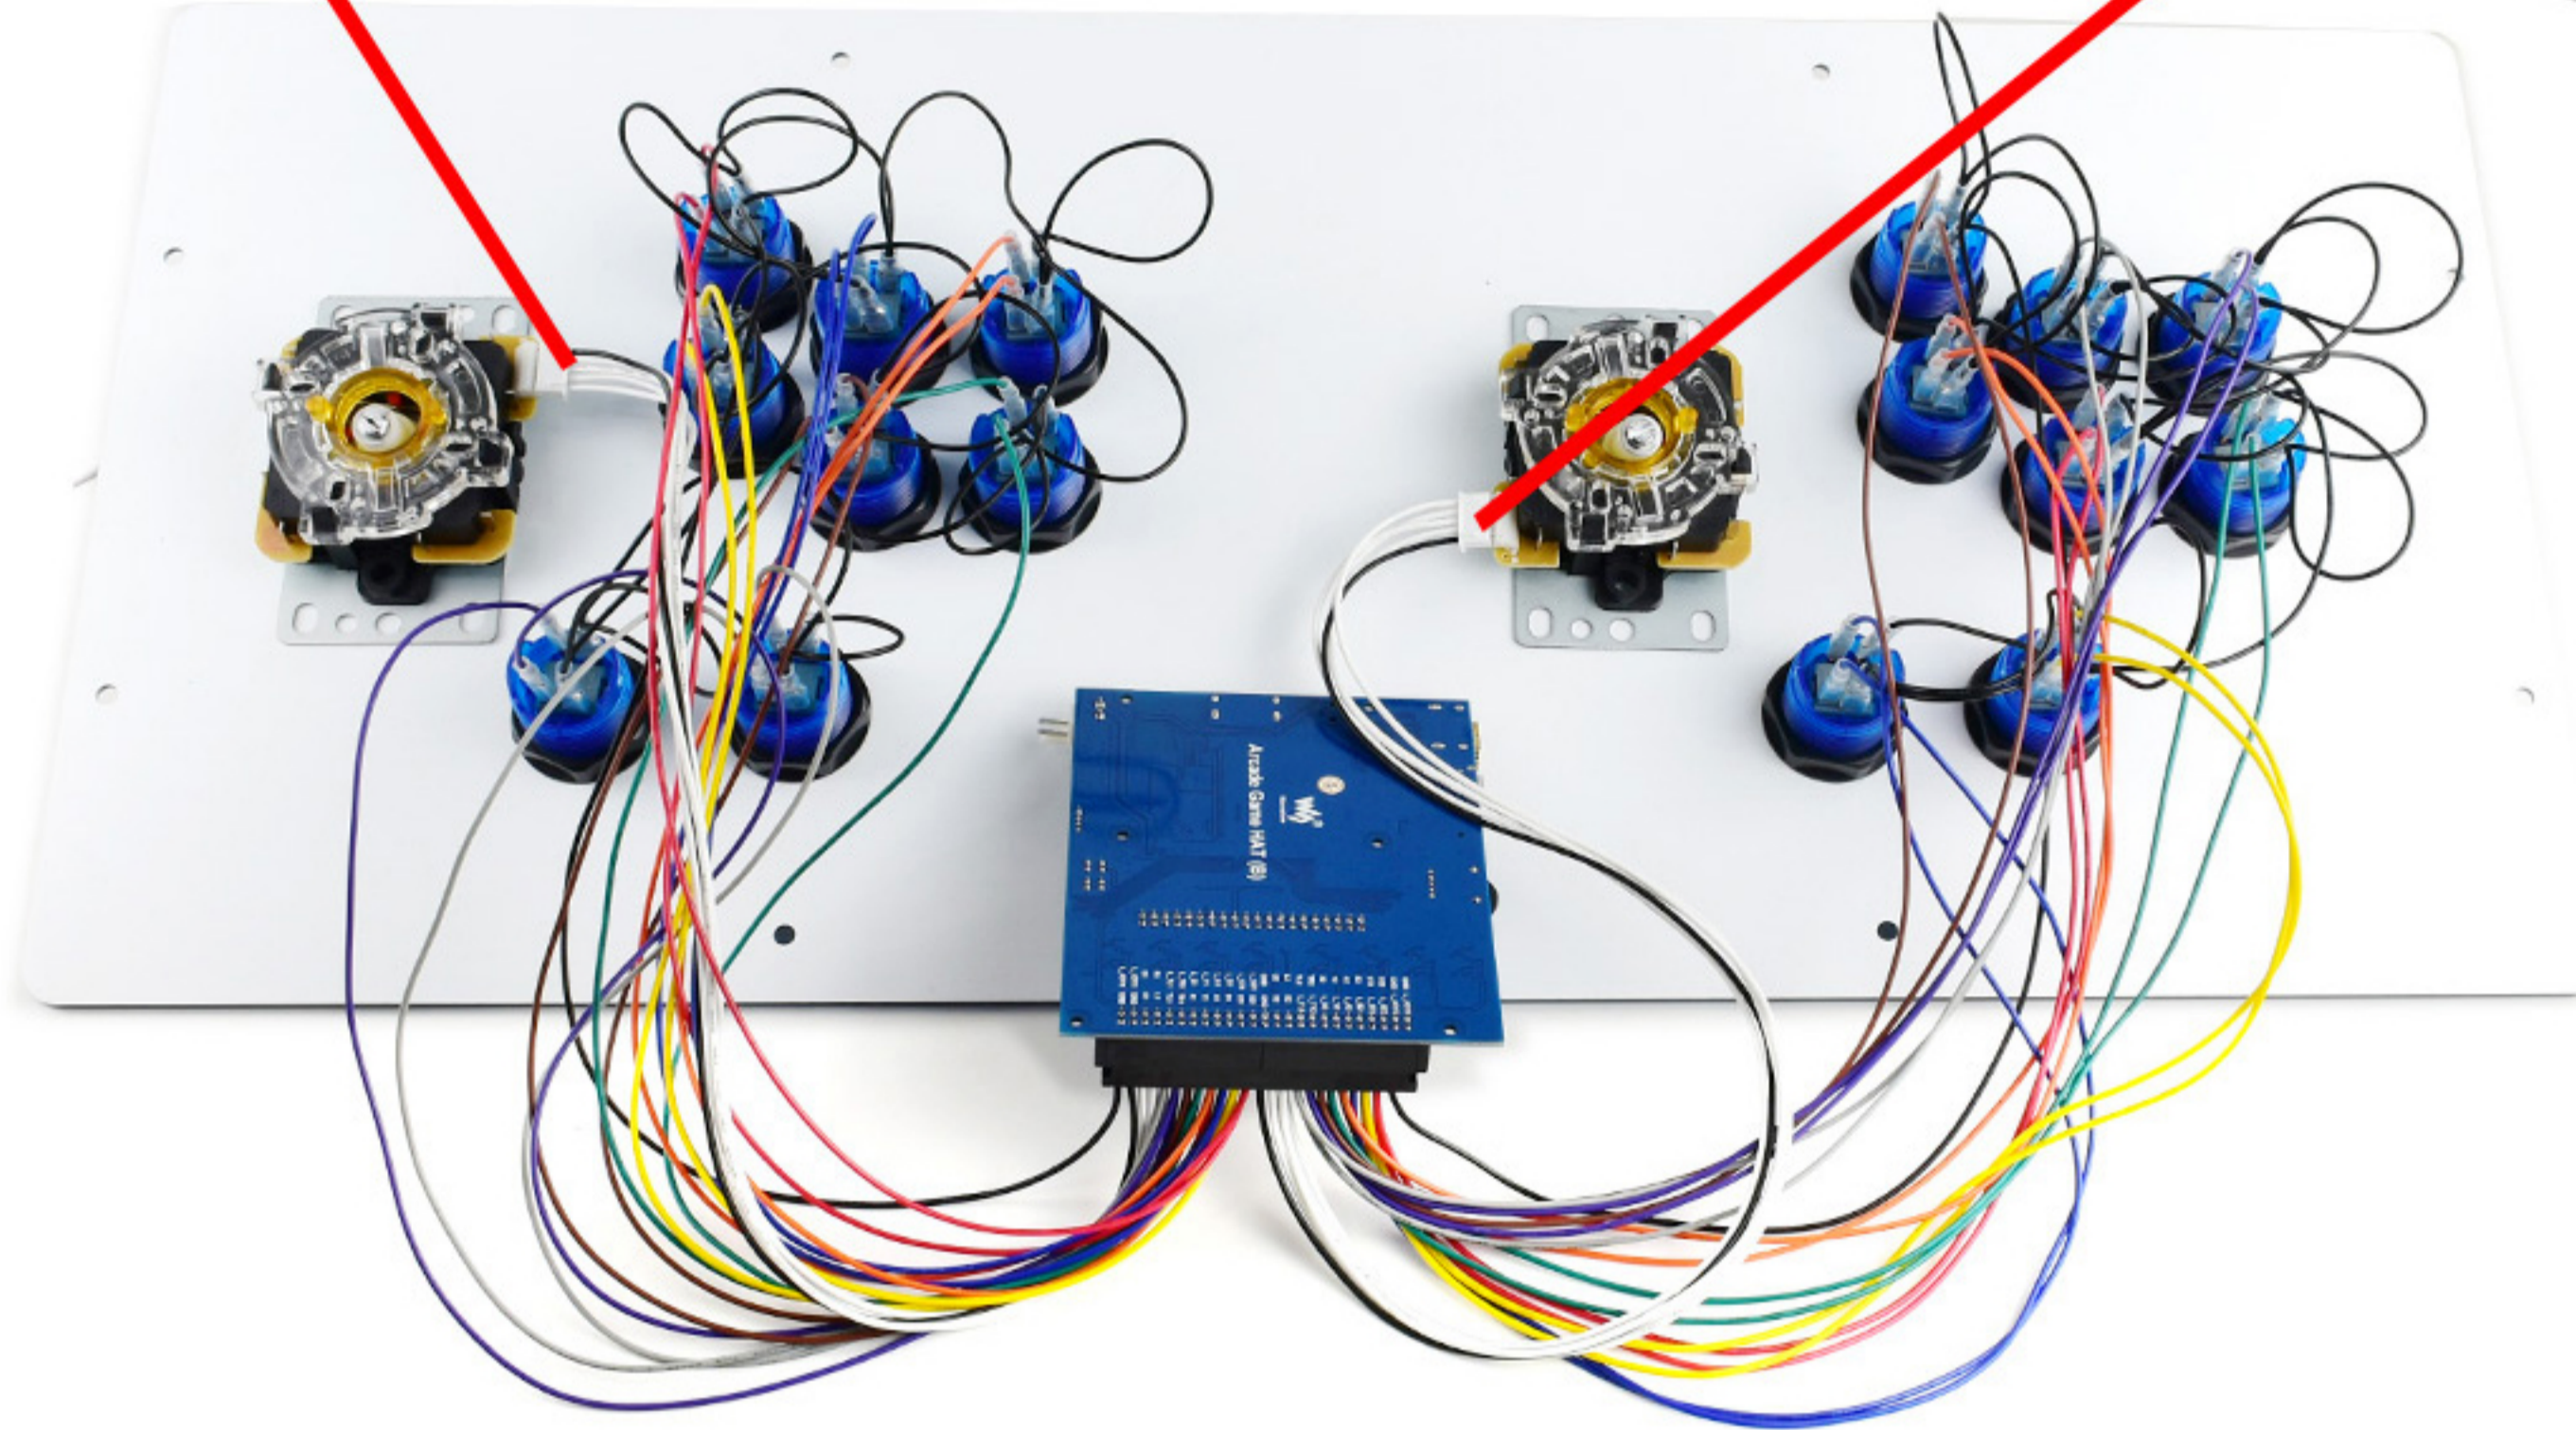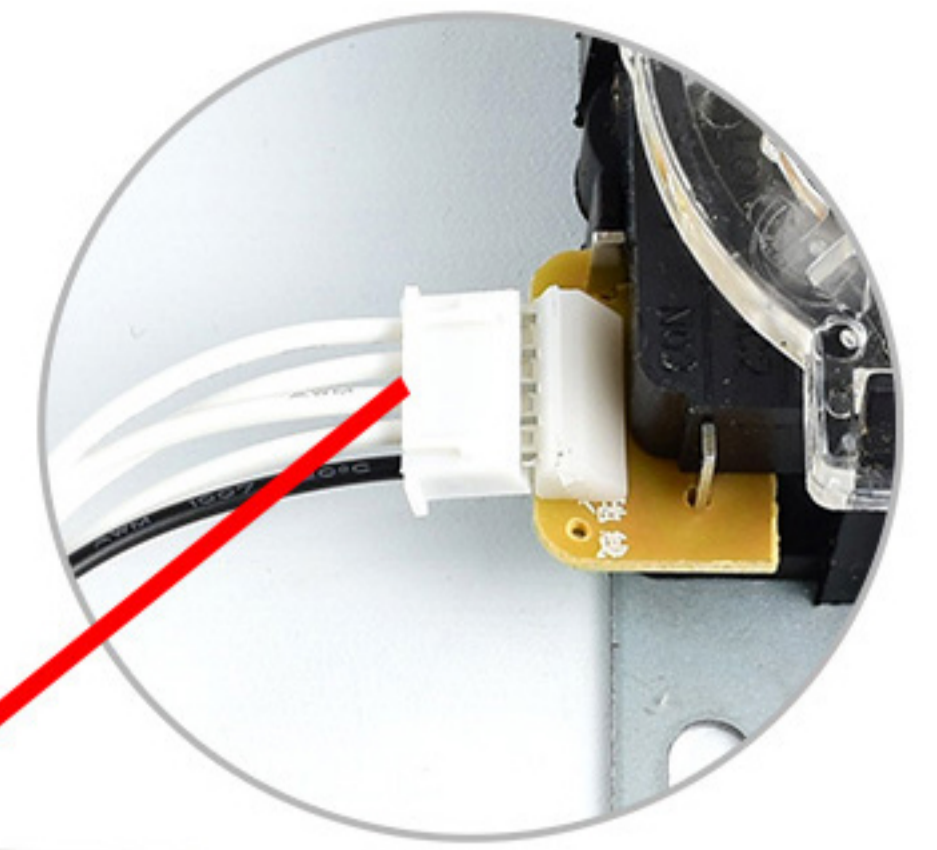

4. Assemble rubber feet. Set the standoffs for Arcade Game HAT(B)

Screw: M4*8

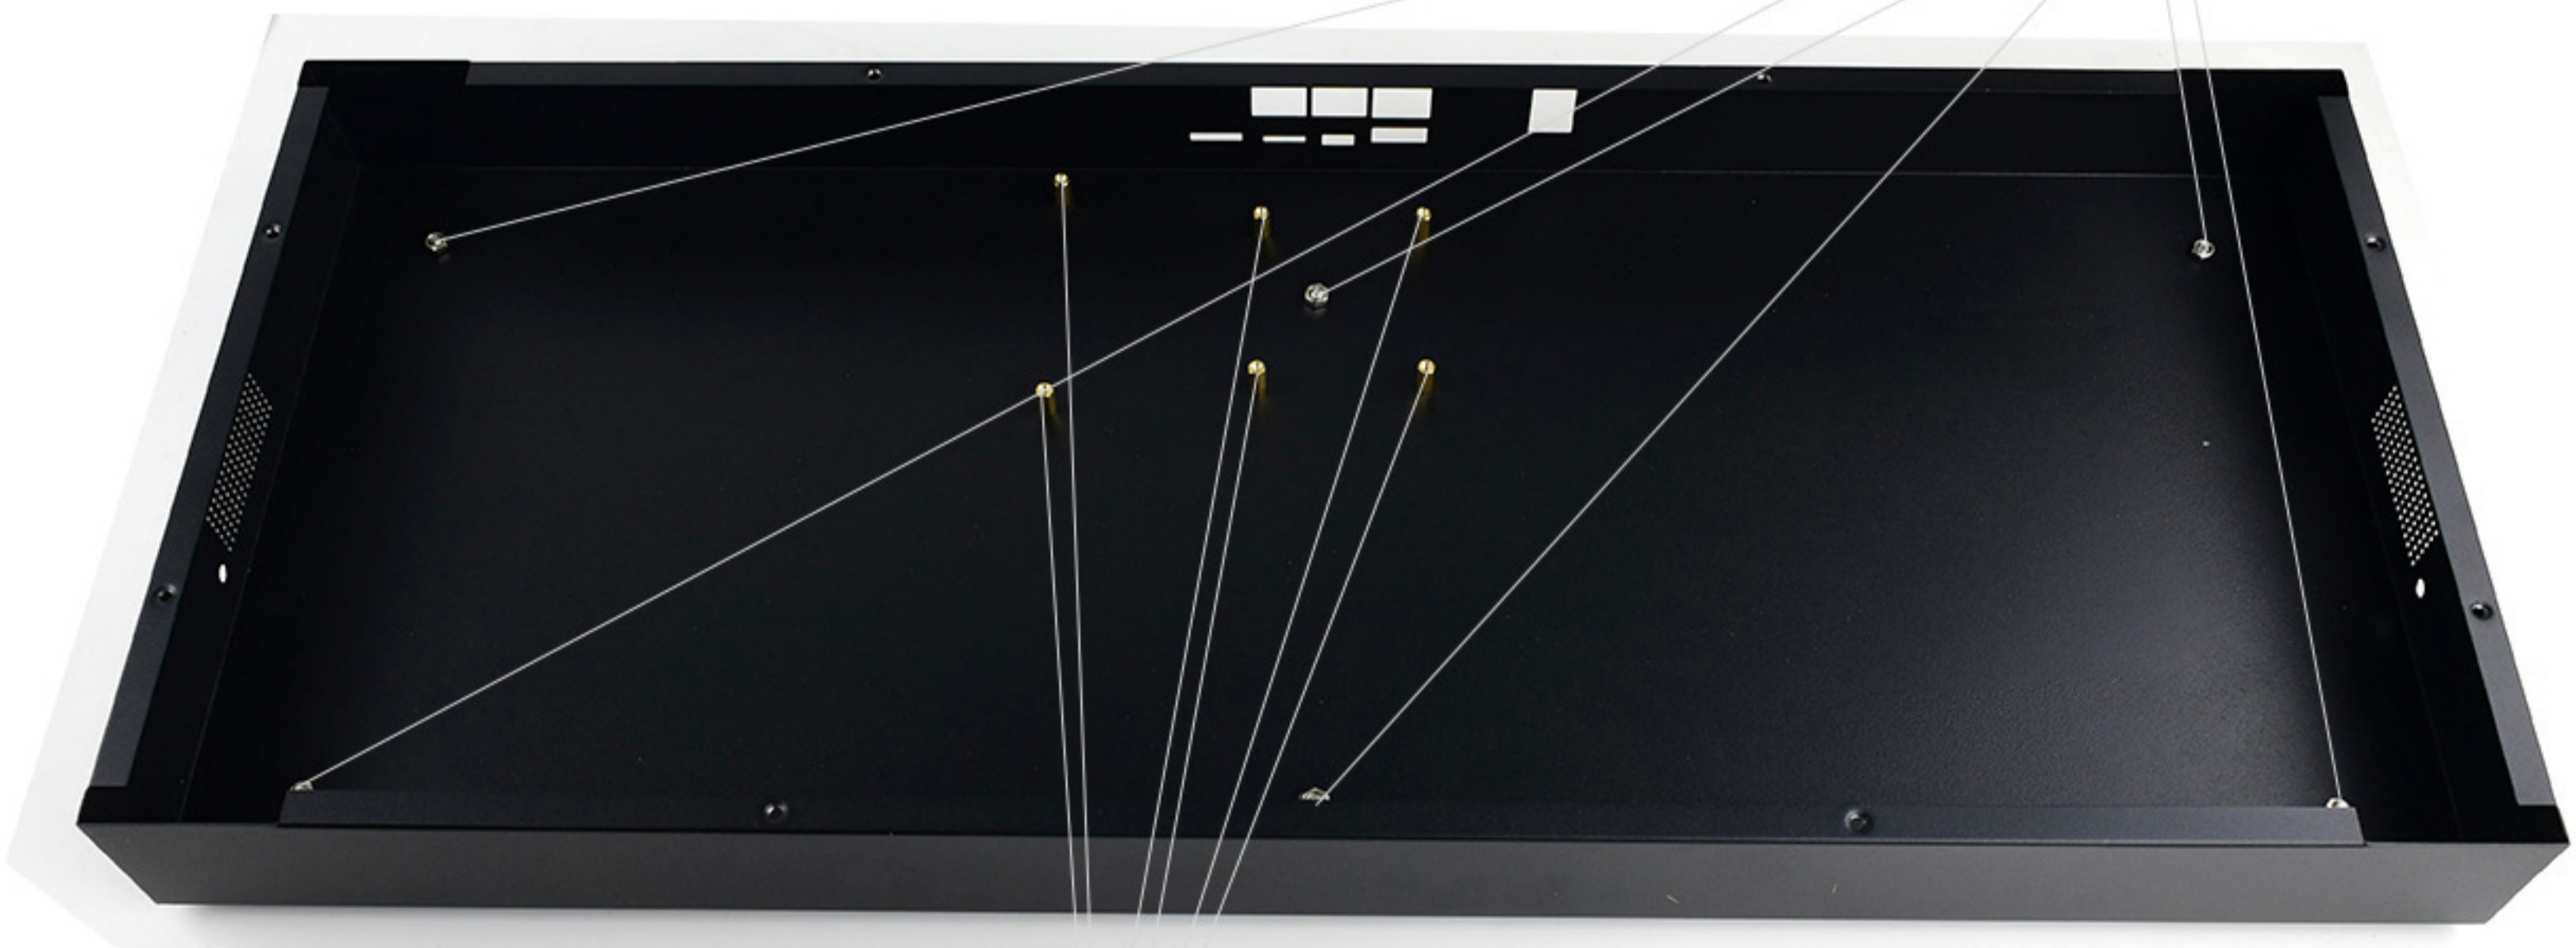


Standoff: M2.5*10



Screw: M2.5*5

5. Disconnect the cables from Arcade Game HAT (B) and fix it in bottom case.
Attach Raspberry Pi on Arcade Game HAT(B)

Screw: M2.5*5

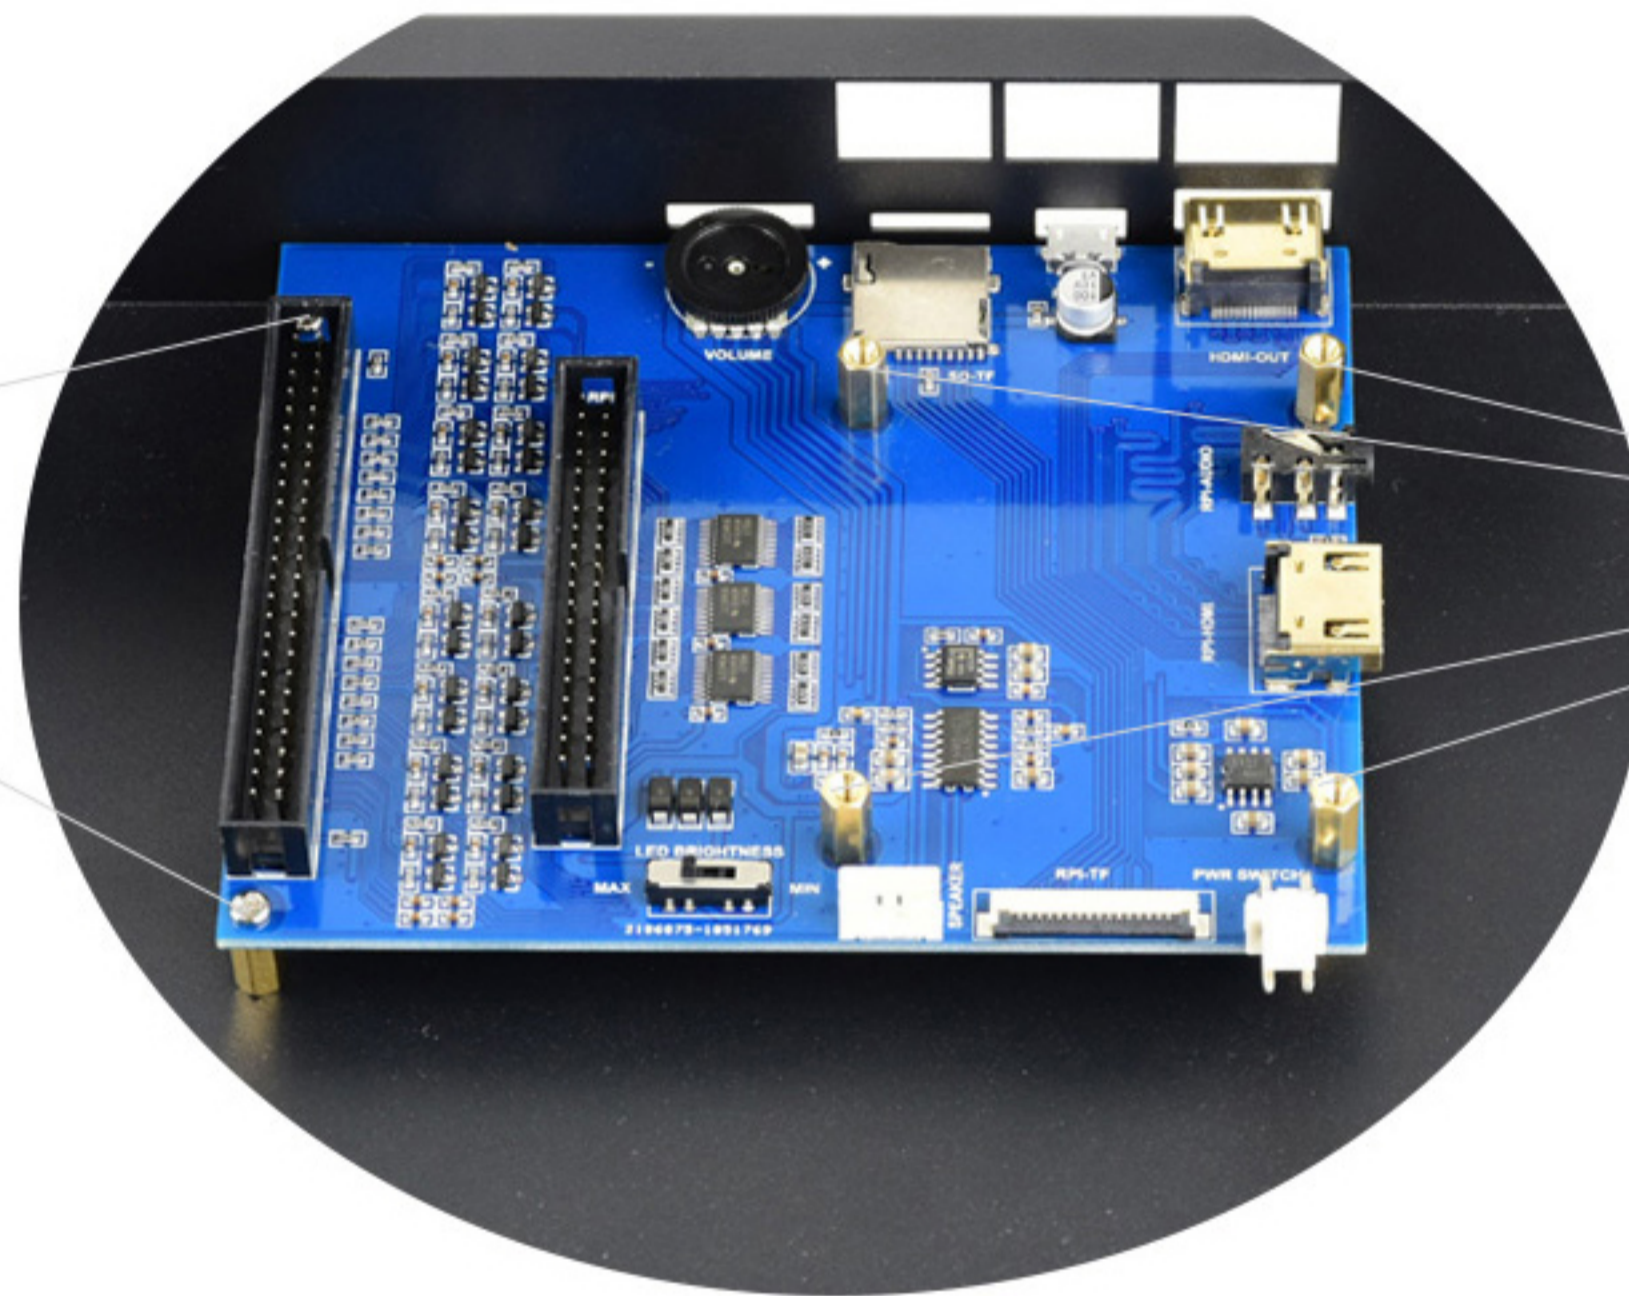


Standoff: M2.5*10+6



Standoff: M2.5*5



6. Connect FFC to TF-Card for Arcade Game HAT(B) and inset it to Raspberry Pi.

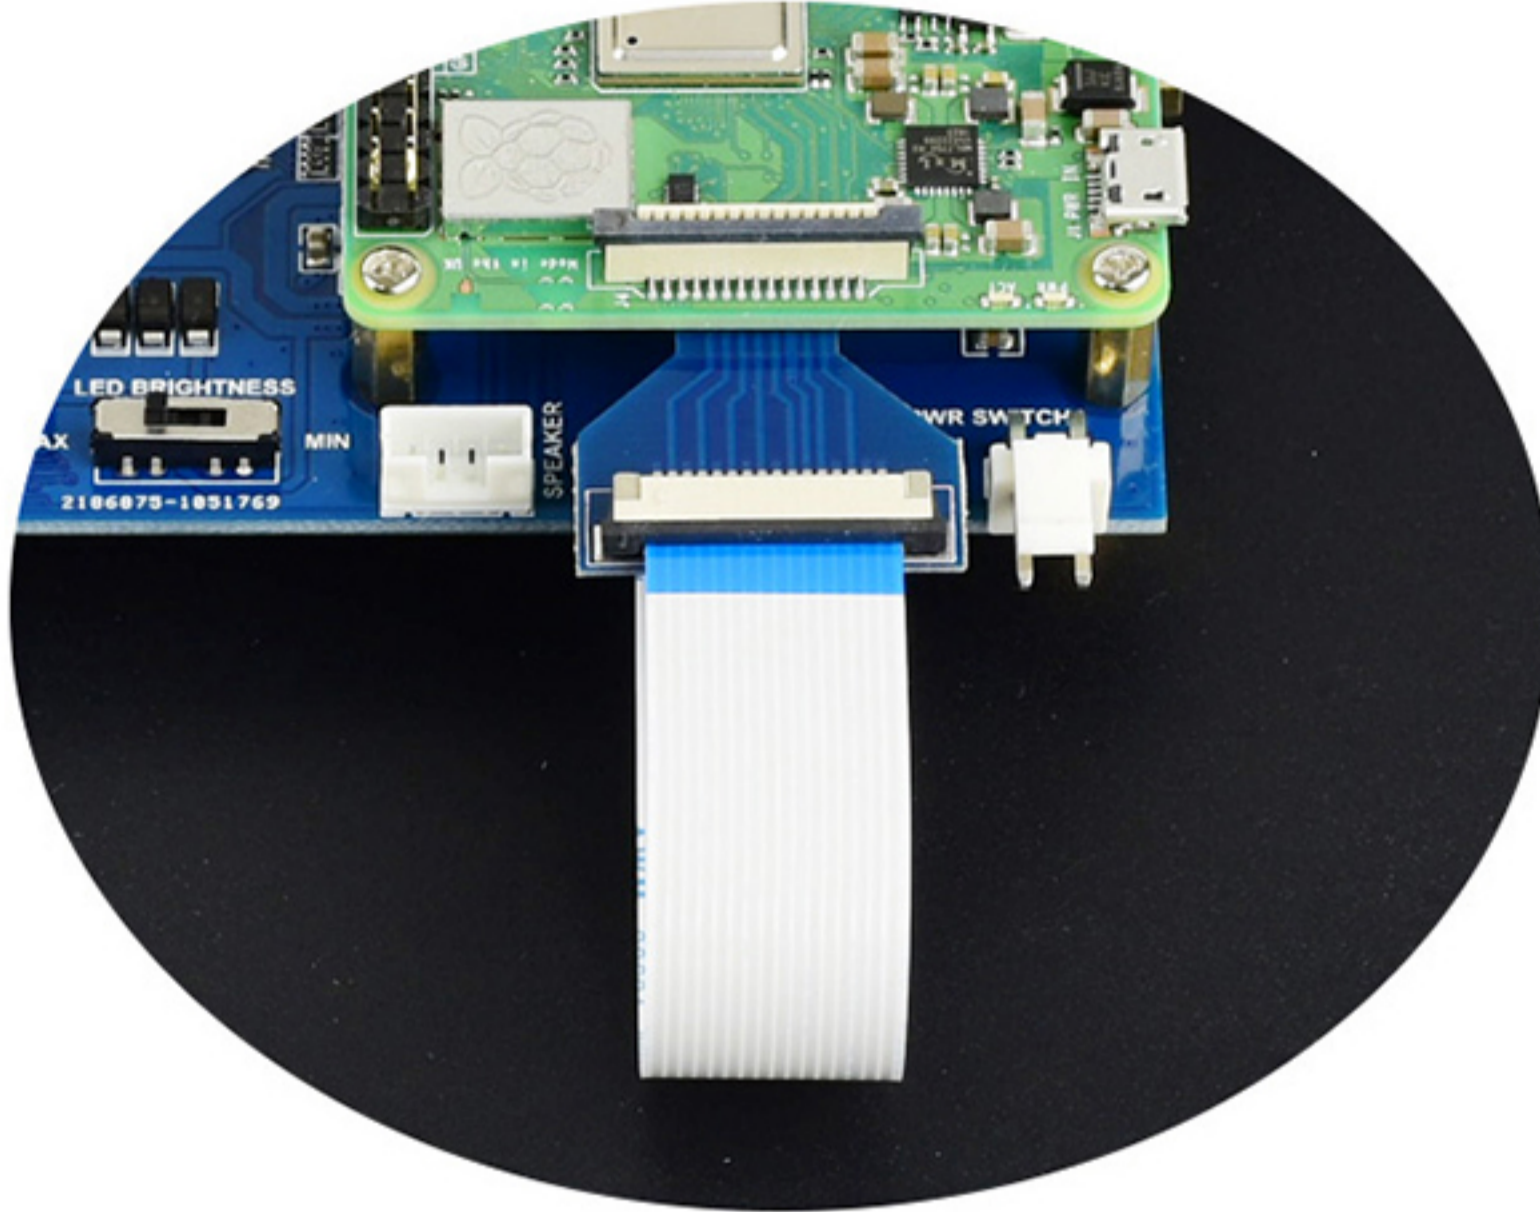


Connect another side of FFC to Arcade Game HAT (B)

7. Connect Power switch.



Red line is connected to “—”



Black line is to “0”

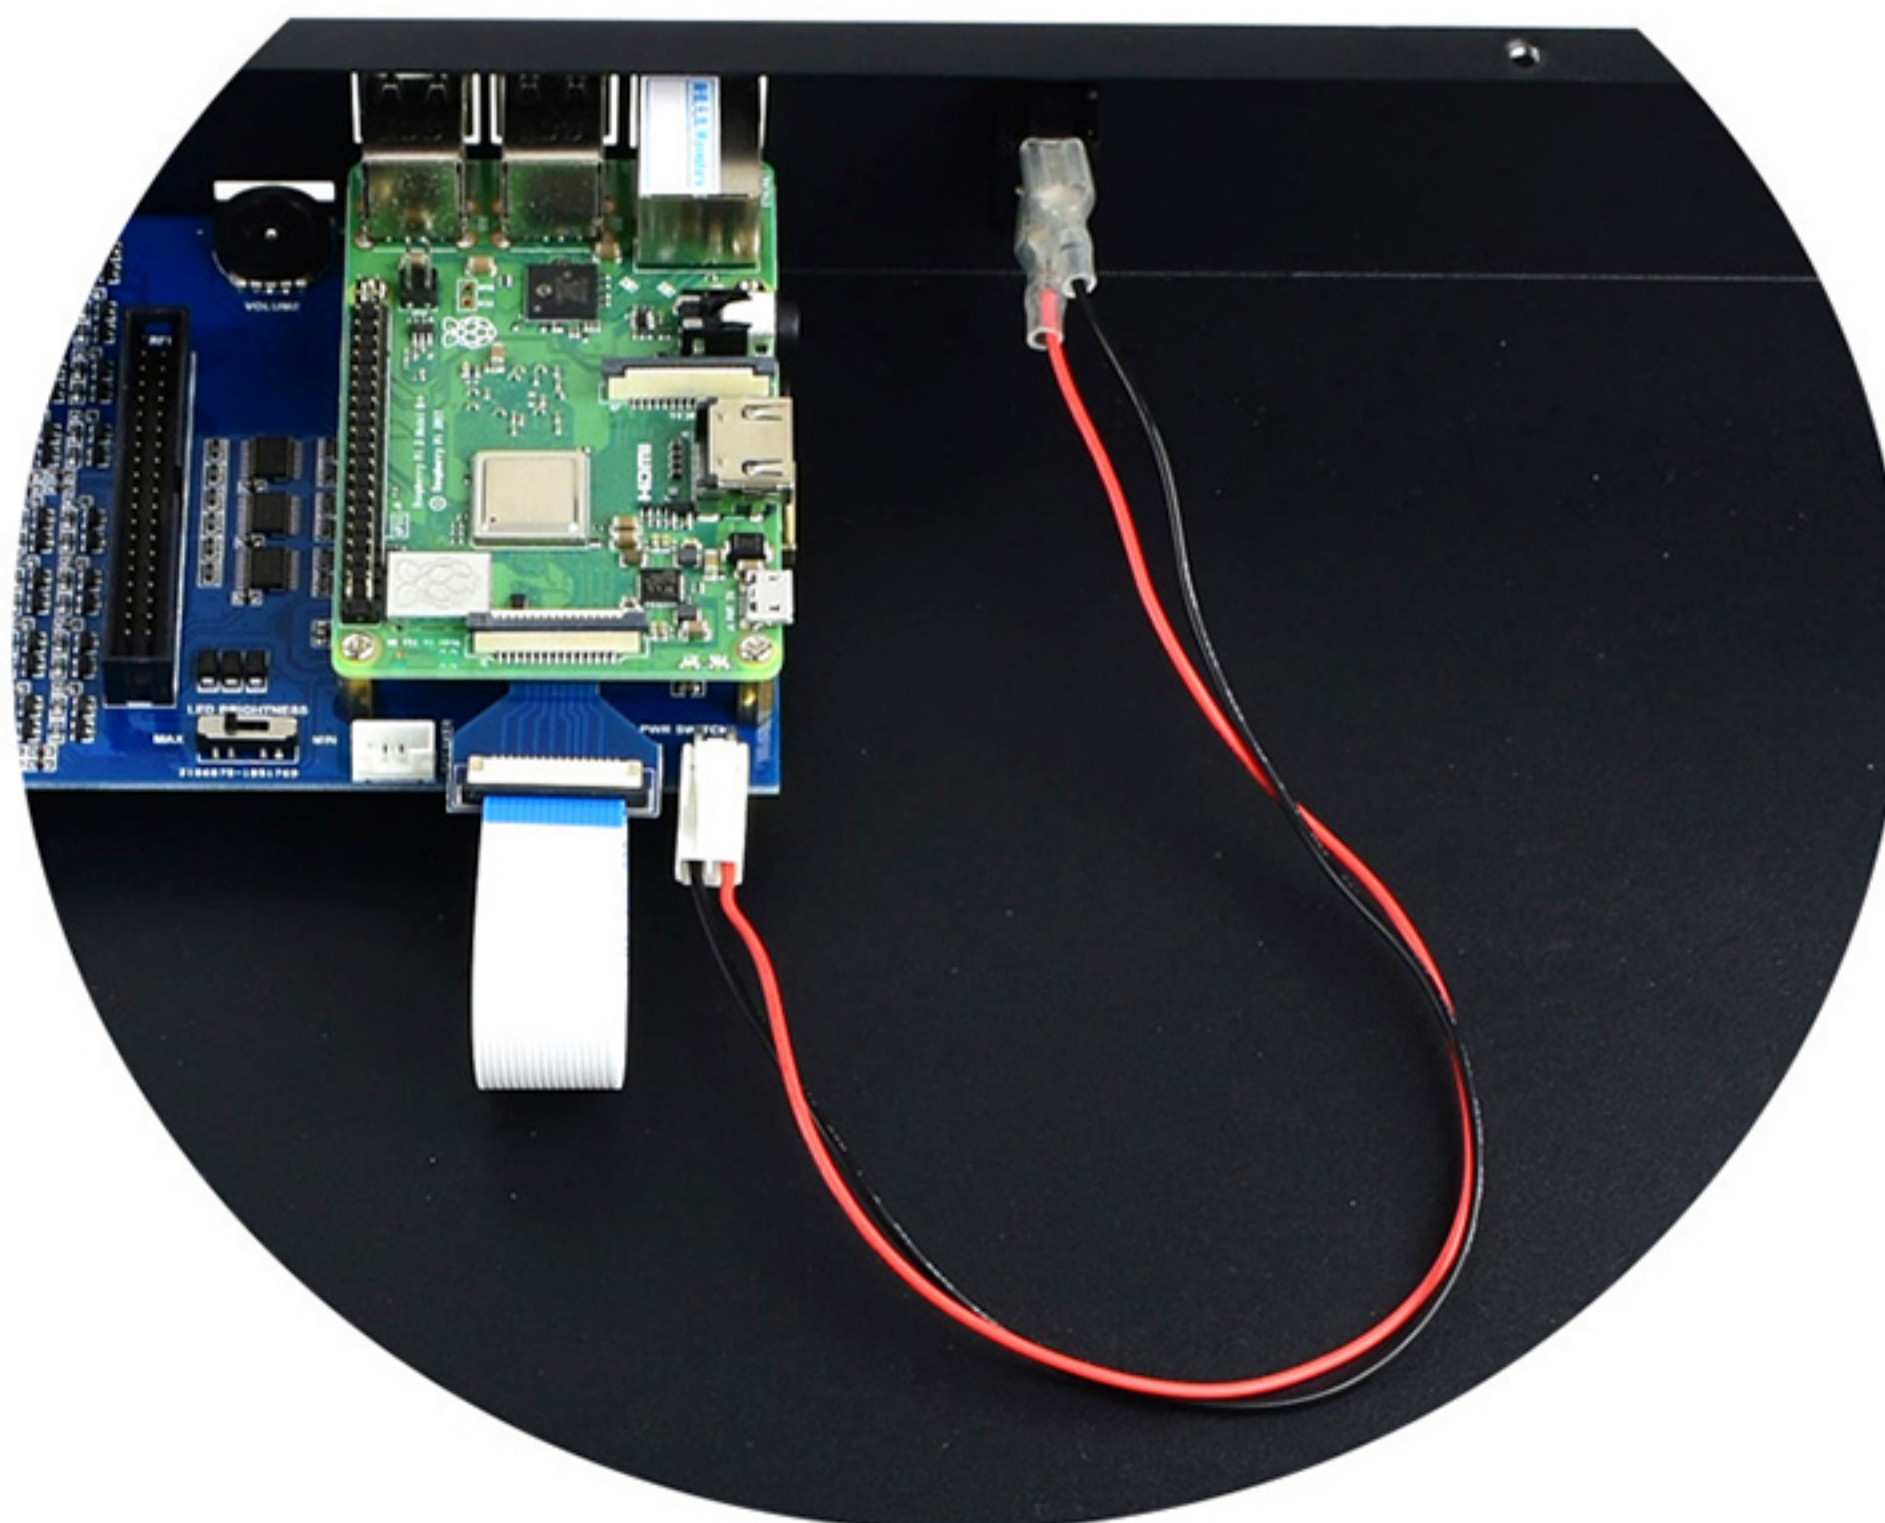

Ribbon cable
Audio cable
HDMI cable

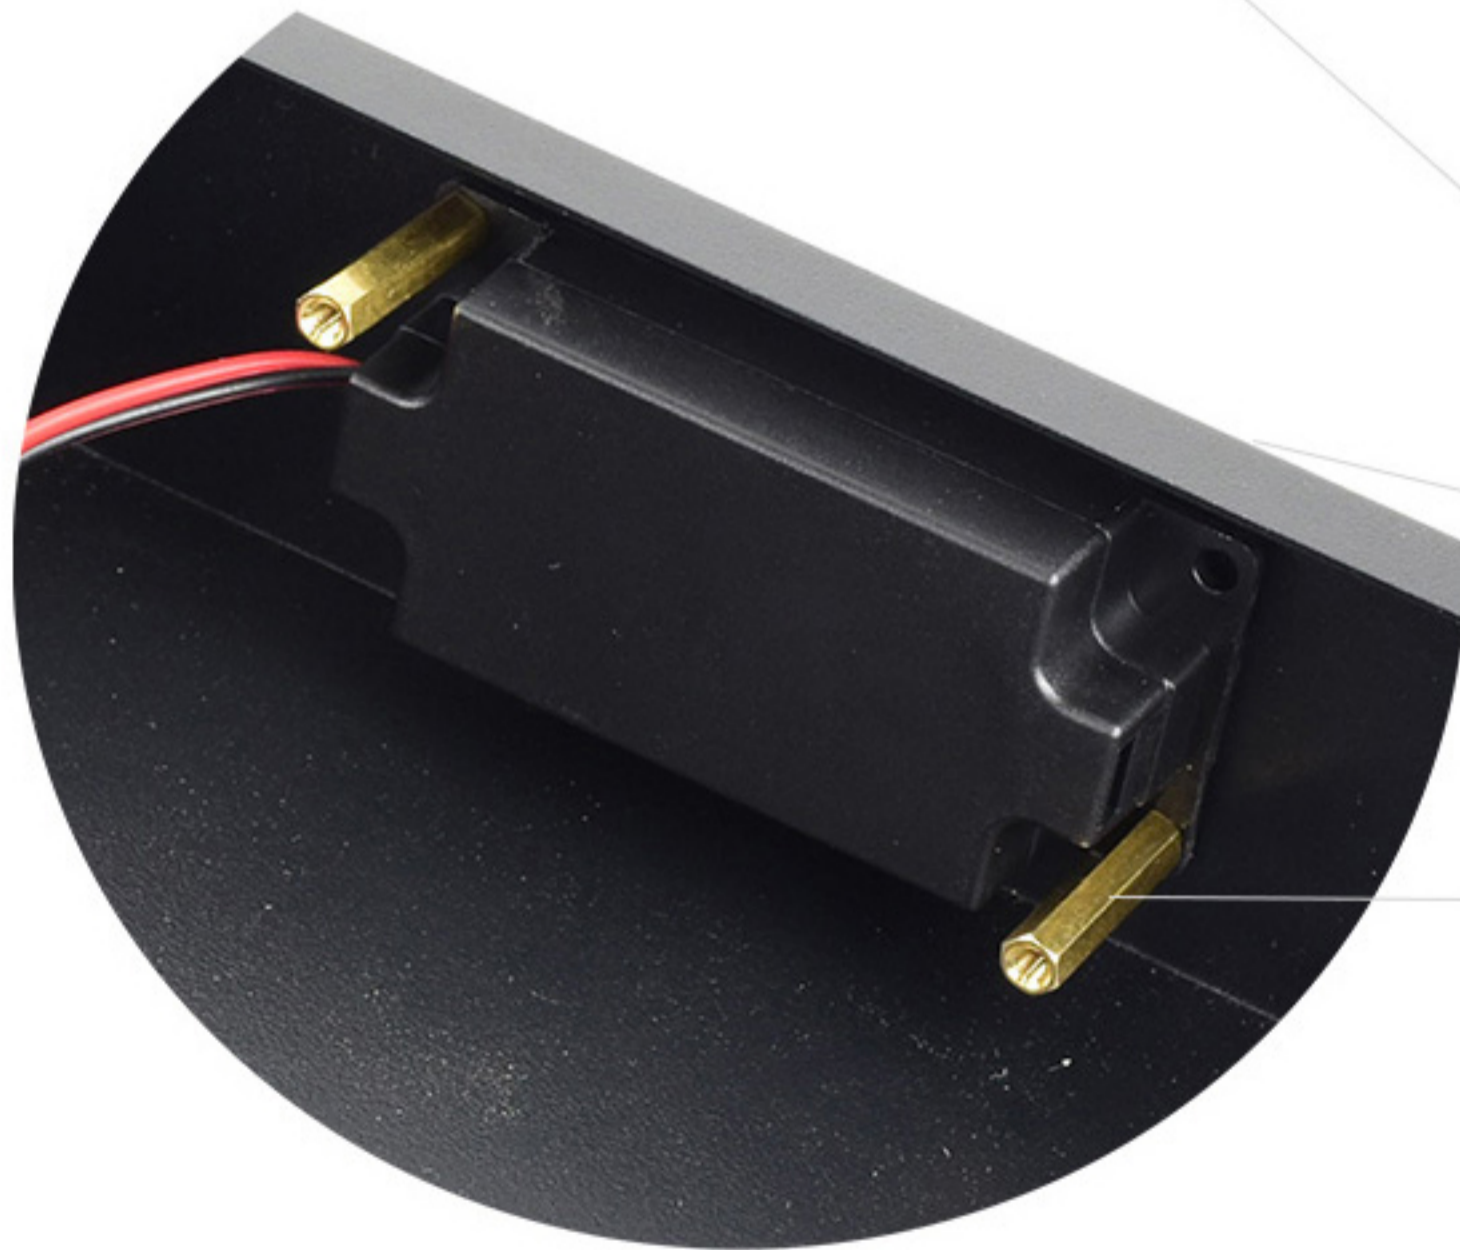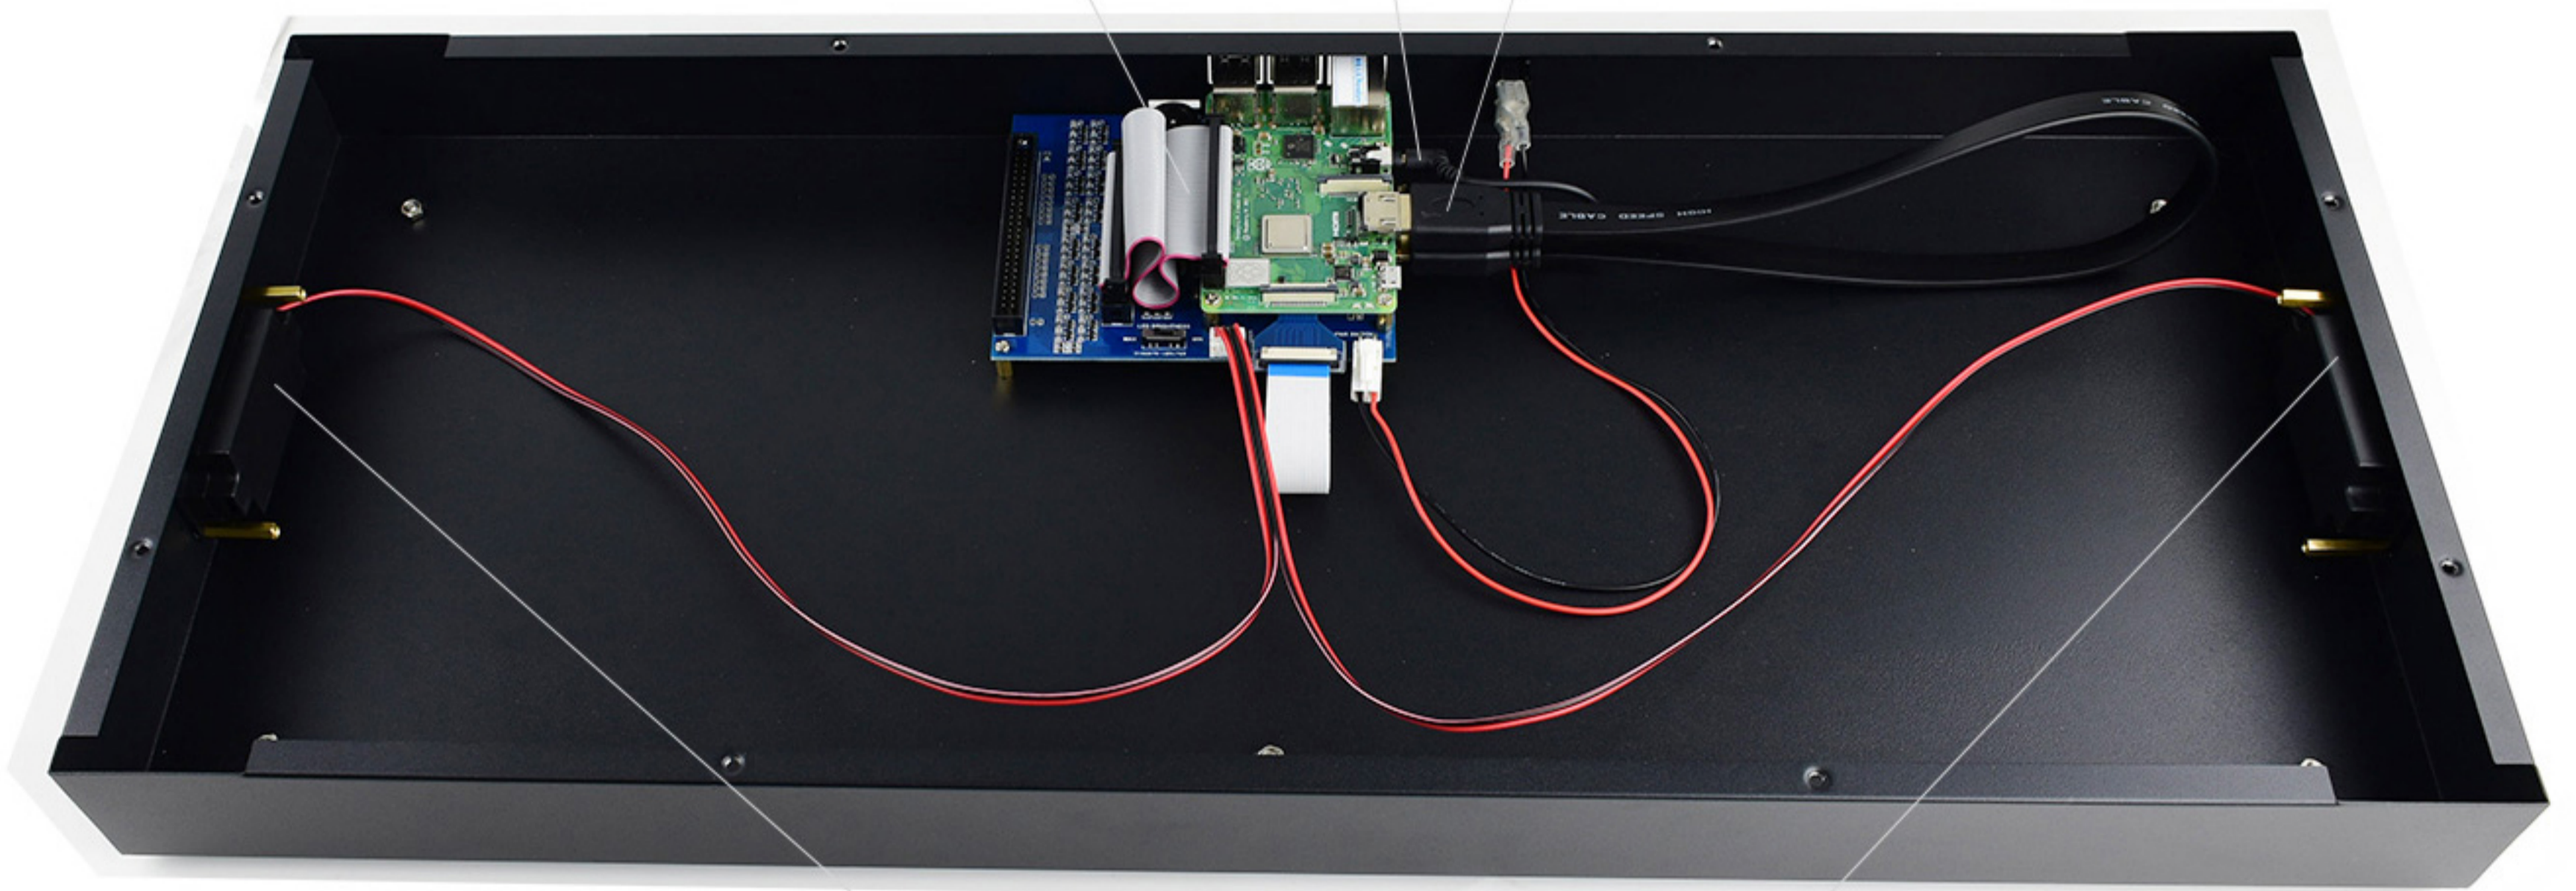

Screw: M3*8
Standoff: M3*20

8. Replace the cables to Arcade Game HAT(B), Then assemble Arcade-c-2P.

