


W
aveshare
Core1121-XF

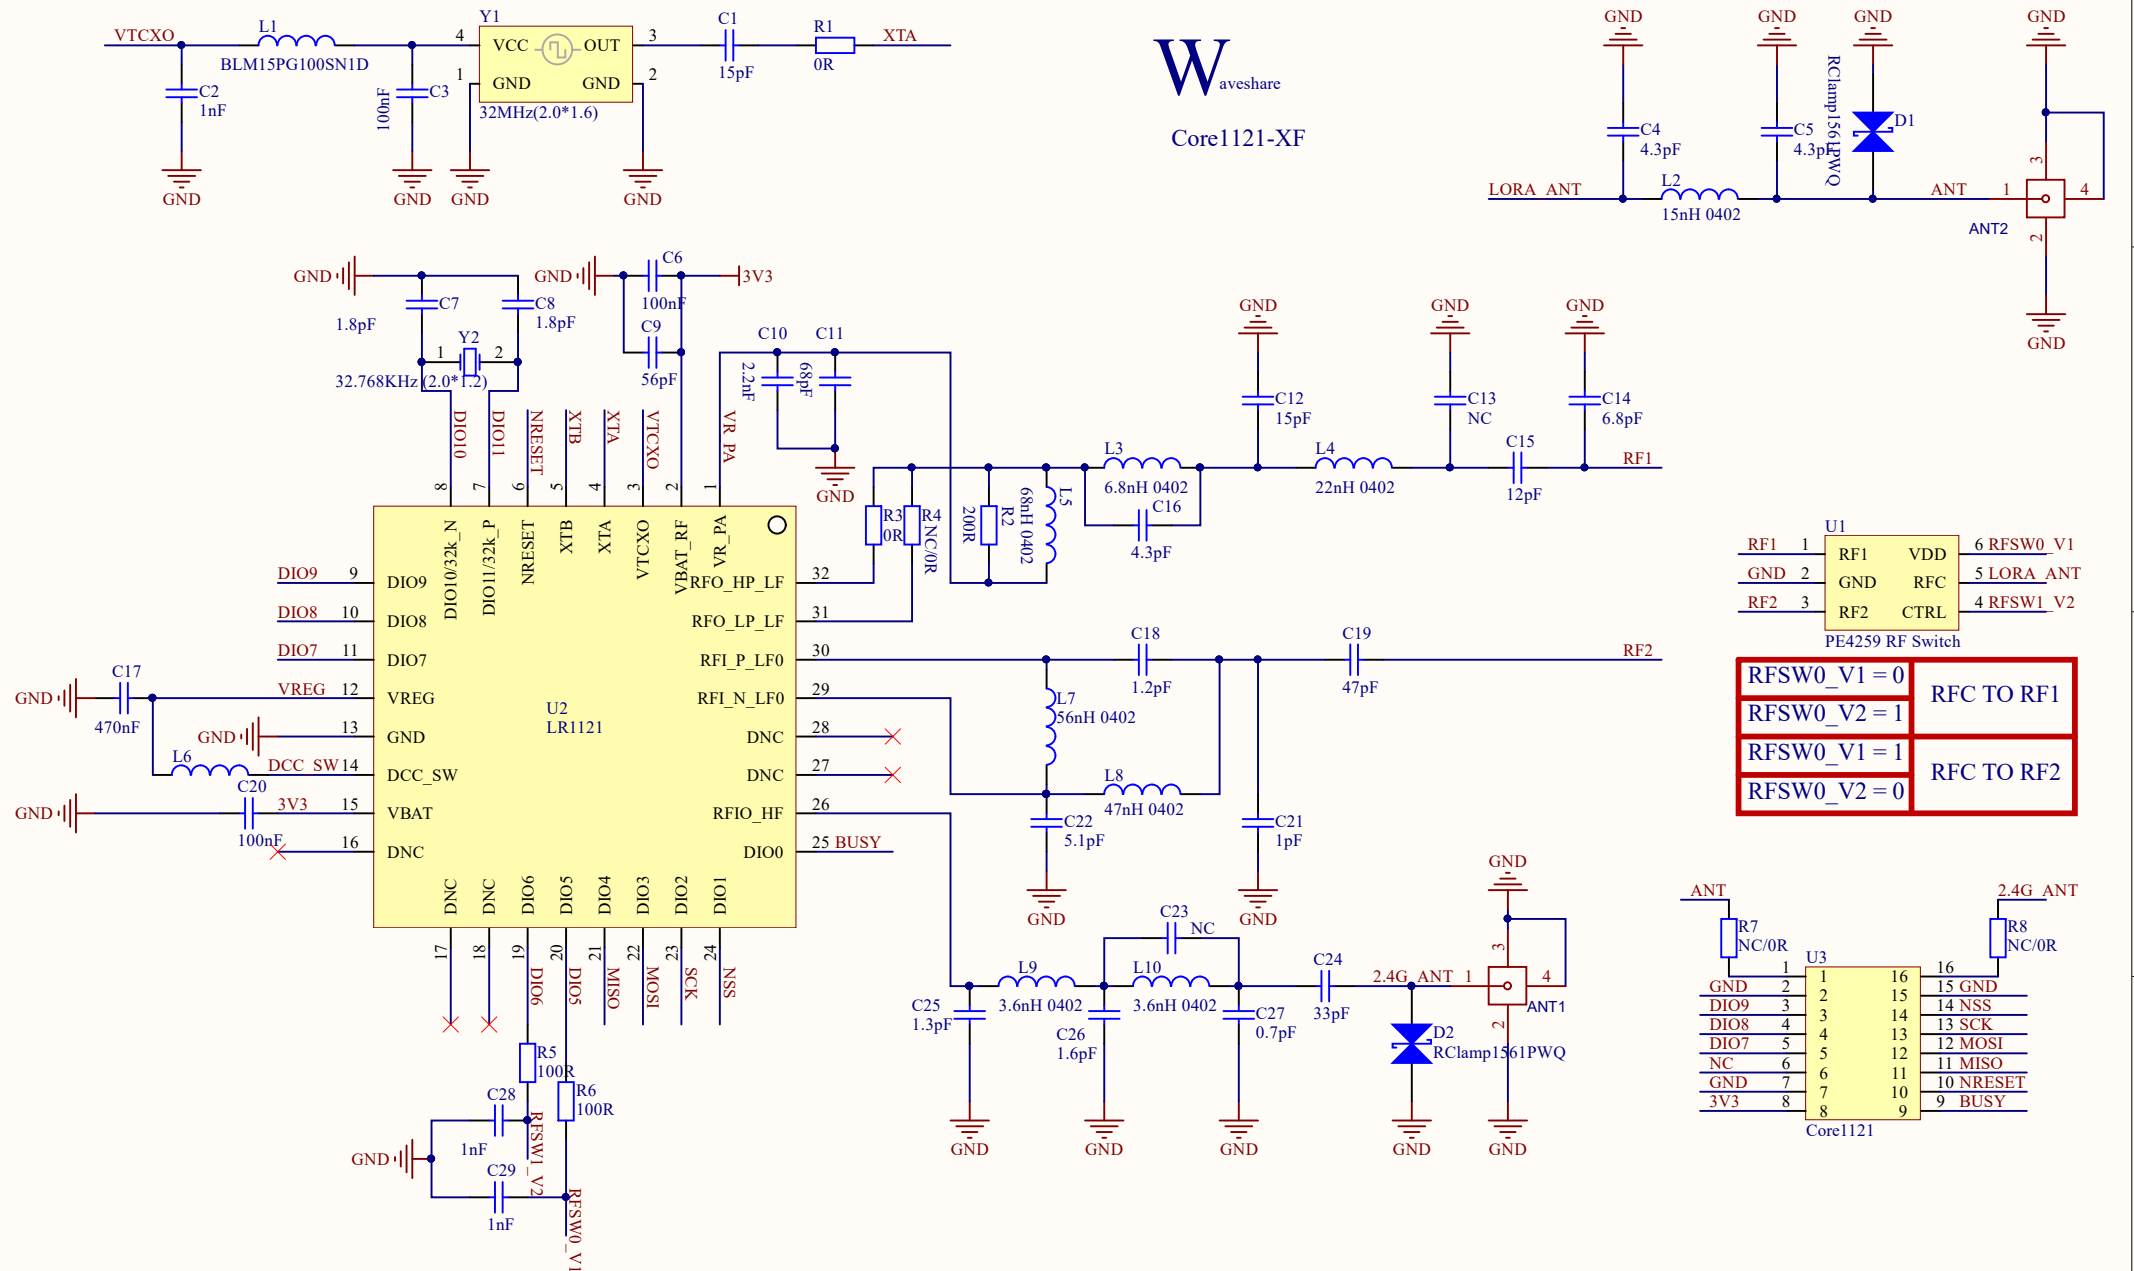

RFSW0_V1 = 0	RFC TO RF1
RFSW0_V2 = 1	RFC TO RF1
RFSW0_V1 = 1	RFC TO RF2
RFSW0_V2 = 0	RFC TO RF2

ANT	1	16	16	2.4G ANT
GND	2	15	15	GND
DIO9	3	14	14	NSS
DIO8	4	13	13	SCK
DIO7	5	12	12	MOSI
NC	6	11	11	MISO
GND	7	10	10	NRESET
3V3	8	9	9	BUSY

Core1121

