




Type-C Interface

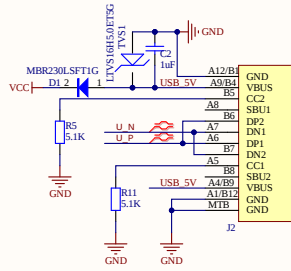


POWER

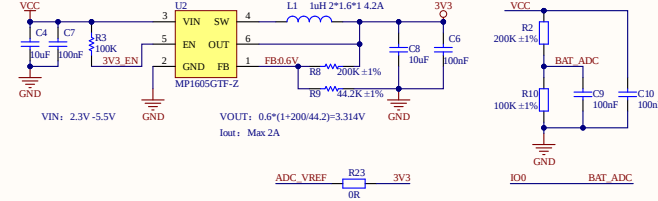


Recharge

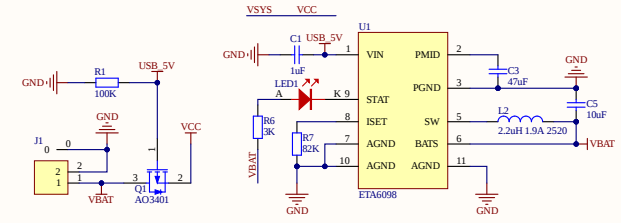


IO Expand

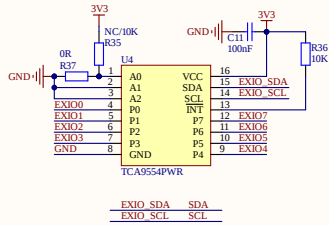



Gyroscope

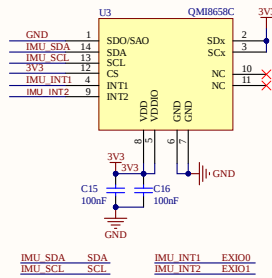


RGB

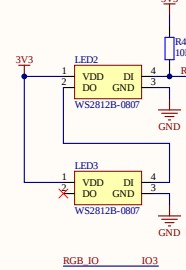

1.9 INCH

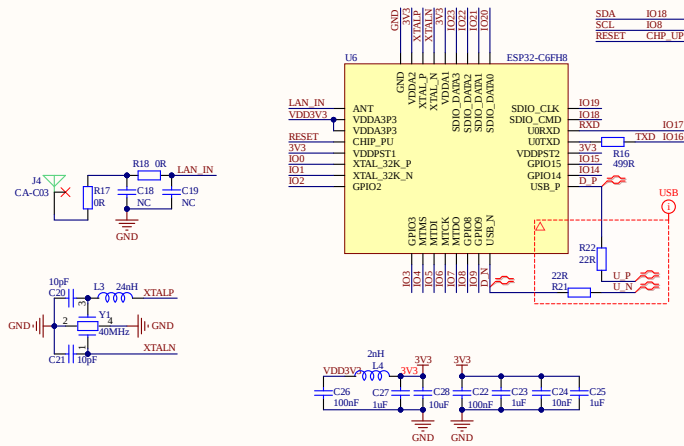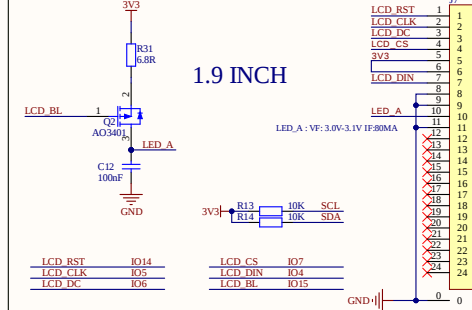


KEY

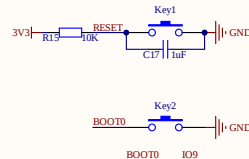

W ESP32-C6-LCD-1.9

GPIO_OUT

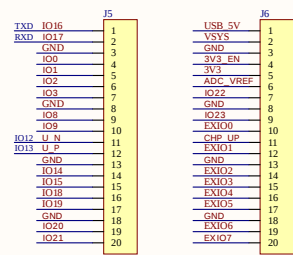

GPIO	LCD	SD Card	IMU	UART	I2C	KEY_IO	Other
IO0							BAT_ADC
IO1							IO1
IO2							IO2
IO3	RGB_IO						IO3
IO4	LCD_DIN	SD_MOSI					IO4
IO5	LCD_CLK	SD_CLK					IO5
IO6	LCD_DC						IO6
IO7	LCD_CS						IO7
IO8			IMU_SCL		SCL		IO8
IO9						BOOT0	IO9
IO12							IO12
IO13							IO13
IO14	LCD_RST						IO14
IO15	LCD_BL						IO15
IO16				U0TX			IO16
IO17				U0RX			IO17
IO18			IMU_SDA		SDA		IO18
IO19		SD_MISO					IO19
IO20		SD_CS					IO20
IO21							IO21
IO22							IO22
IO23							IO23
RESET						RESET	
EXIO0			IMU_INT1				EXIO0
EXIO1			IMU_INT2				EXIO1
EXIO2							EXIO2
EXIO3							EXIO3
EXIO4							EXIO4
EXIO5							EXIO5
EXIO6							EXIO6
EXIO7							EXIO7

TF CARD

