




Type-C Interface

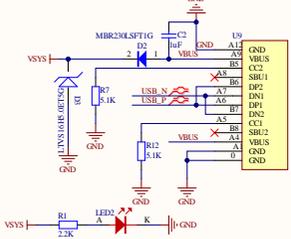


OUTPUT

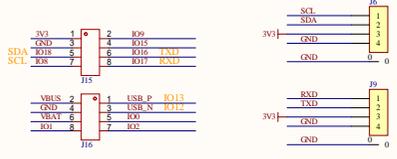


Power & ADC

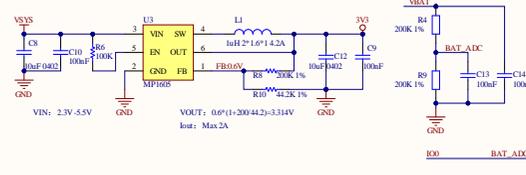


EXIO

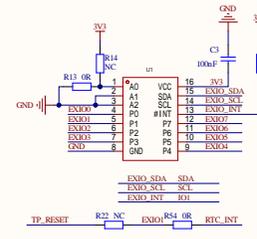


RTC

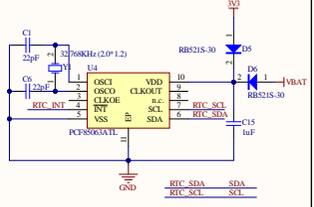


ESP32-C6

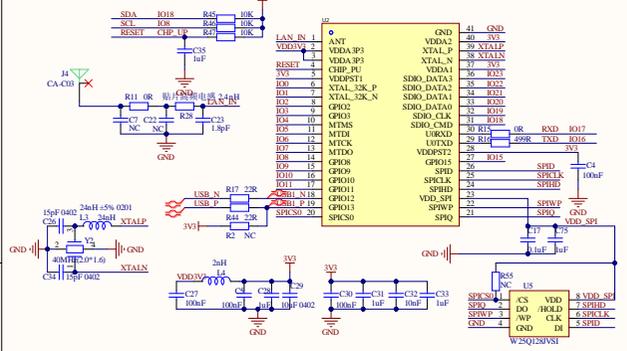


SD Card

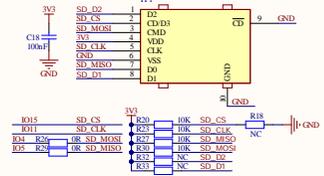


KEY

 


AMOLED_1.43

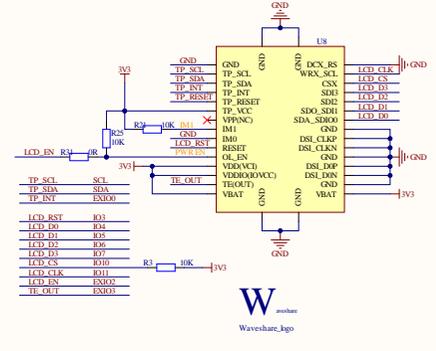


BAT

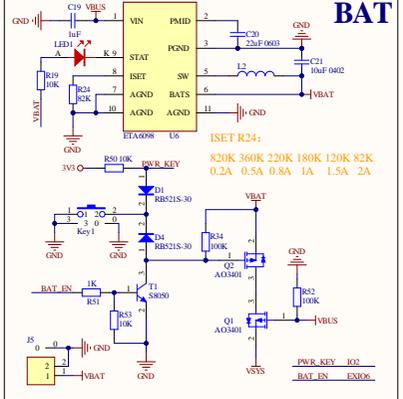


QMI

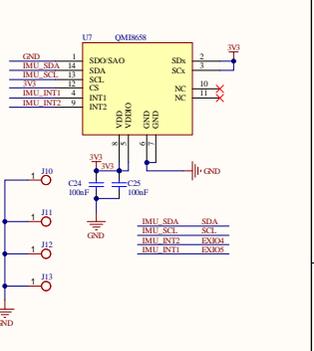


Codec&SPEAKER

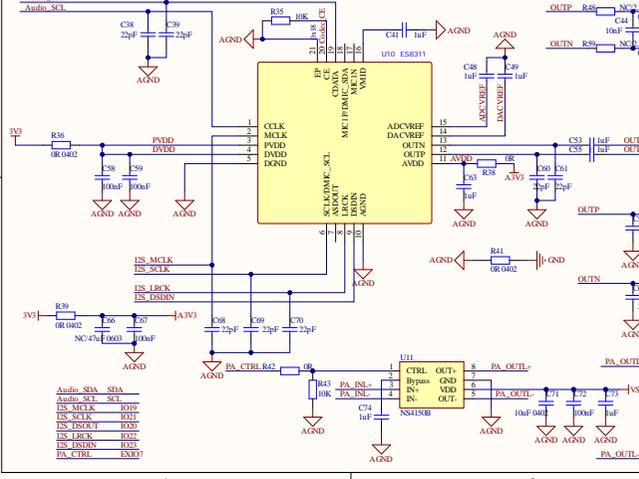


AEC

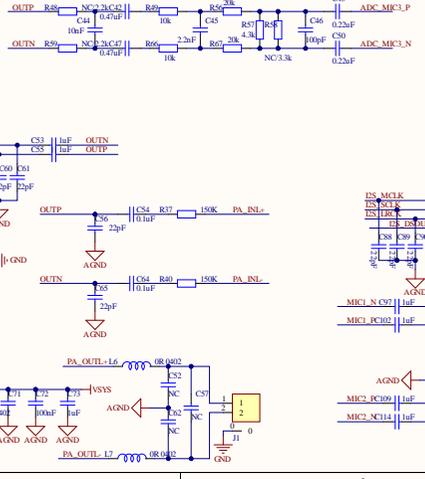

ADC&DMIC

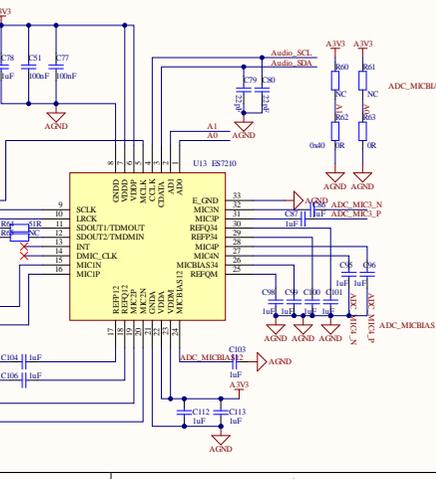

MIC

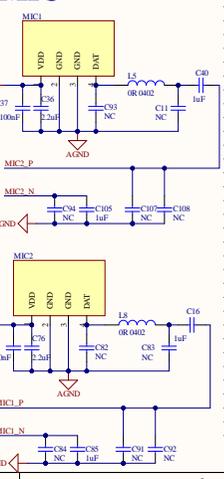

GPIO	LCD	SD Card	IMU	ES8311	RTC	KEY_IO	Other
IO0							BAT_ADC
IO1							IO1
IO2							IO2
IO3	LCD_RST						IO3
IO4	LCD_D0	SD_MOSI					IO4
IO5	LCD_D1	SD_MISO					IO5
IO6	LCD_D2						IO6
IO7	LCD_D3						IO7
IO8					RTC_SCL		SCL
IO9							BOOT0
IO10	LCD_CS						IO10
IO11	LCD_CLK	SD_CLK					IO11
IO12							USB_N
IO13							USB_P
IO15		SD_CS					IO15
IO16							TXD
IO17							RXD
IO18			IMU_SDA		RTC_SDA		SDA
IO19				ES_MCLK			IO19
IO20				ES_ASDOUT			IO20
IO21				ES_SCLK			IO21
IO22				ES_LRCK			IO22
IO23				ES_BSDIN			IO23
RESET							RESET
EXIO0	TP_INT						EXIO0
EXIO1	LCD_EN						EXIO1
EXIO2	TP_OUT						EXIO2
EXIO3			IMU_INT1				EXIO3
EXIO4			IMU_INT2				EXIO4
EXIO5							BAT_EN
EXIO6							EXIO6
EXIO7			PA_CTRL				EXIO7