


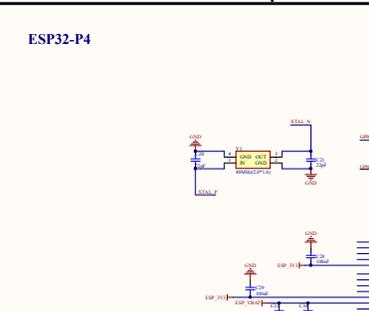
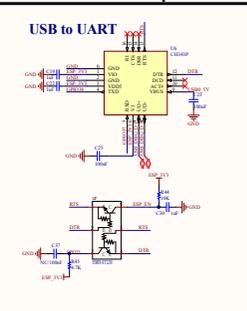
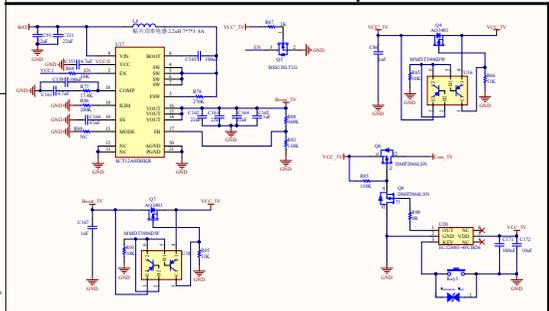
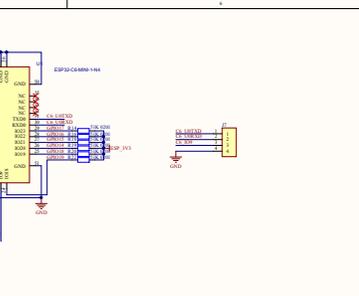
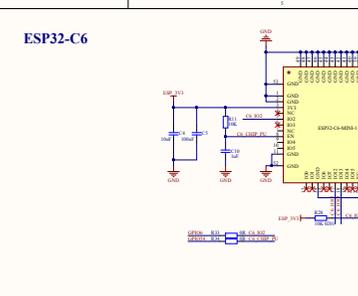
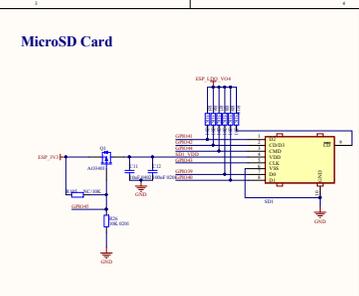
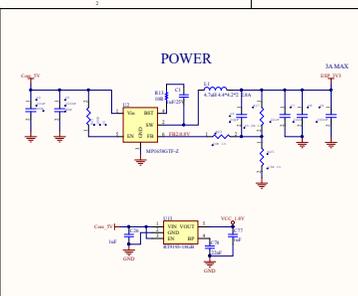
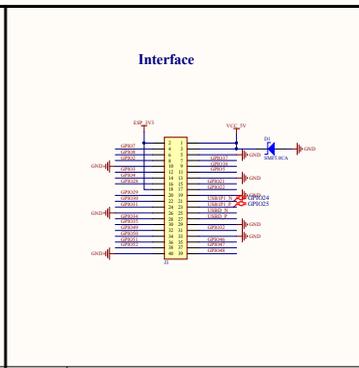
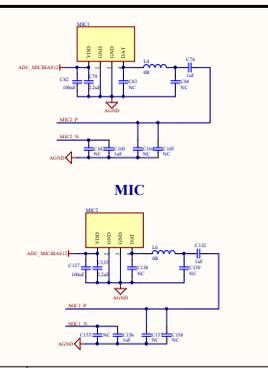
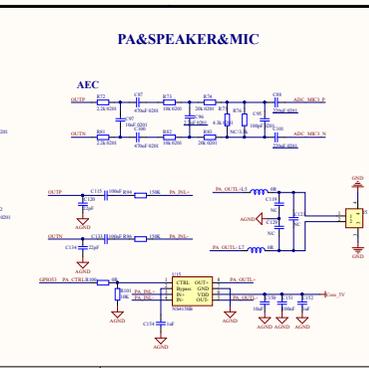
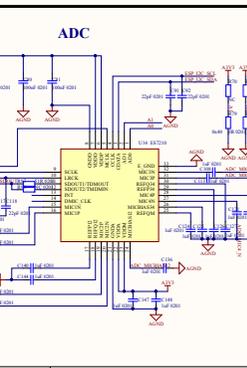
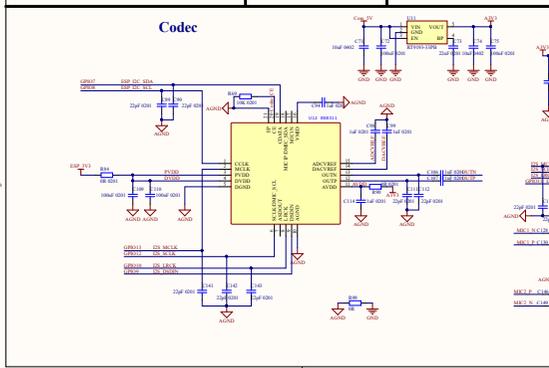
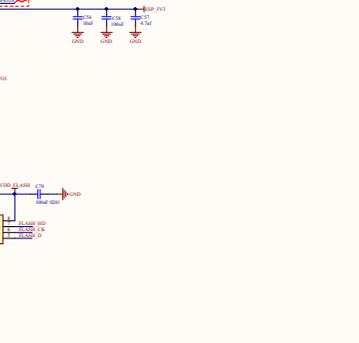
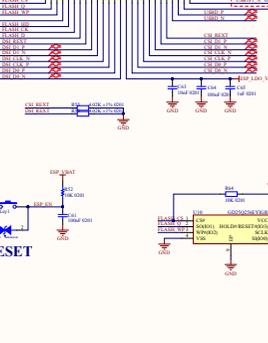
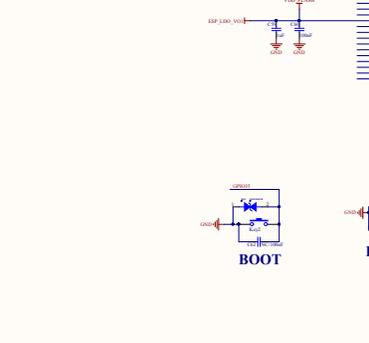
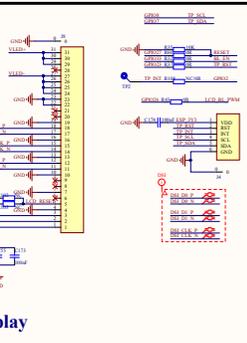
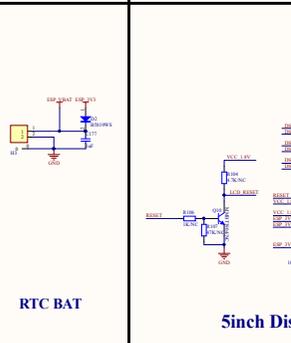
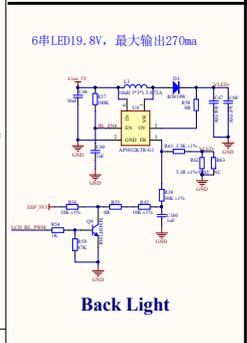
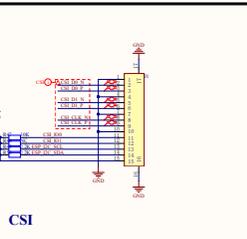
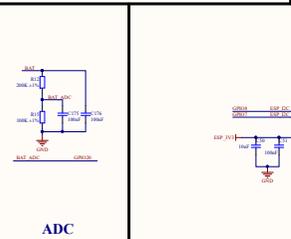


USB

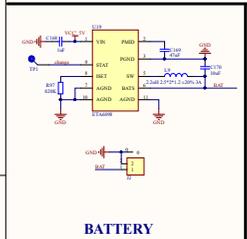

ESP32-P4-WIFI6-Touch-LCD-5

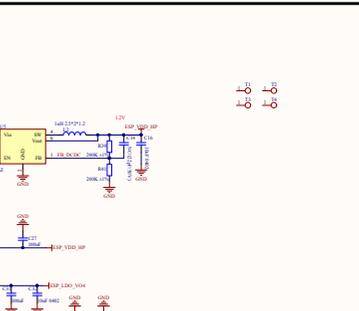

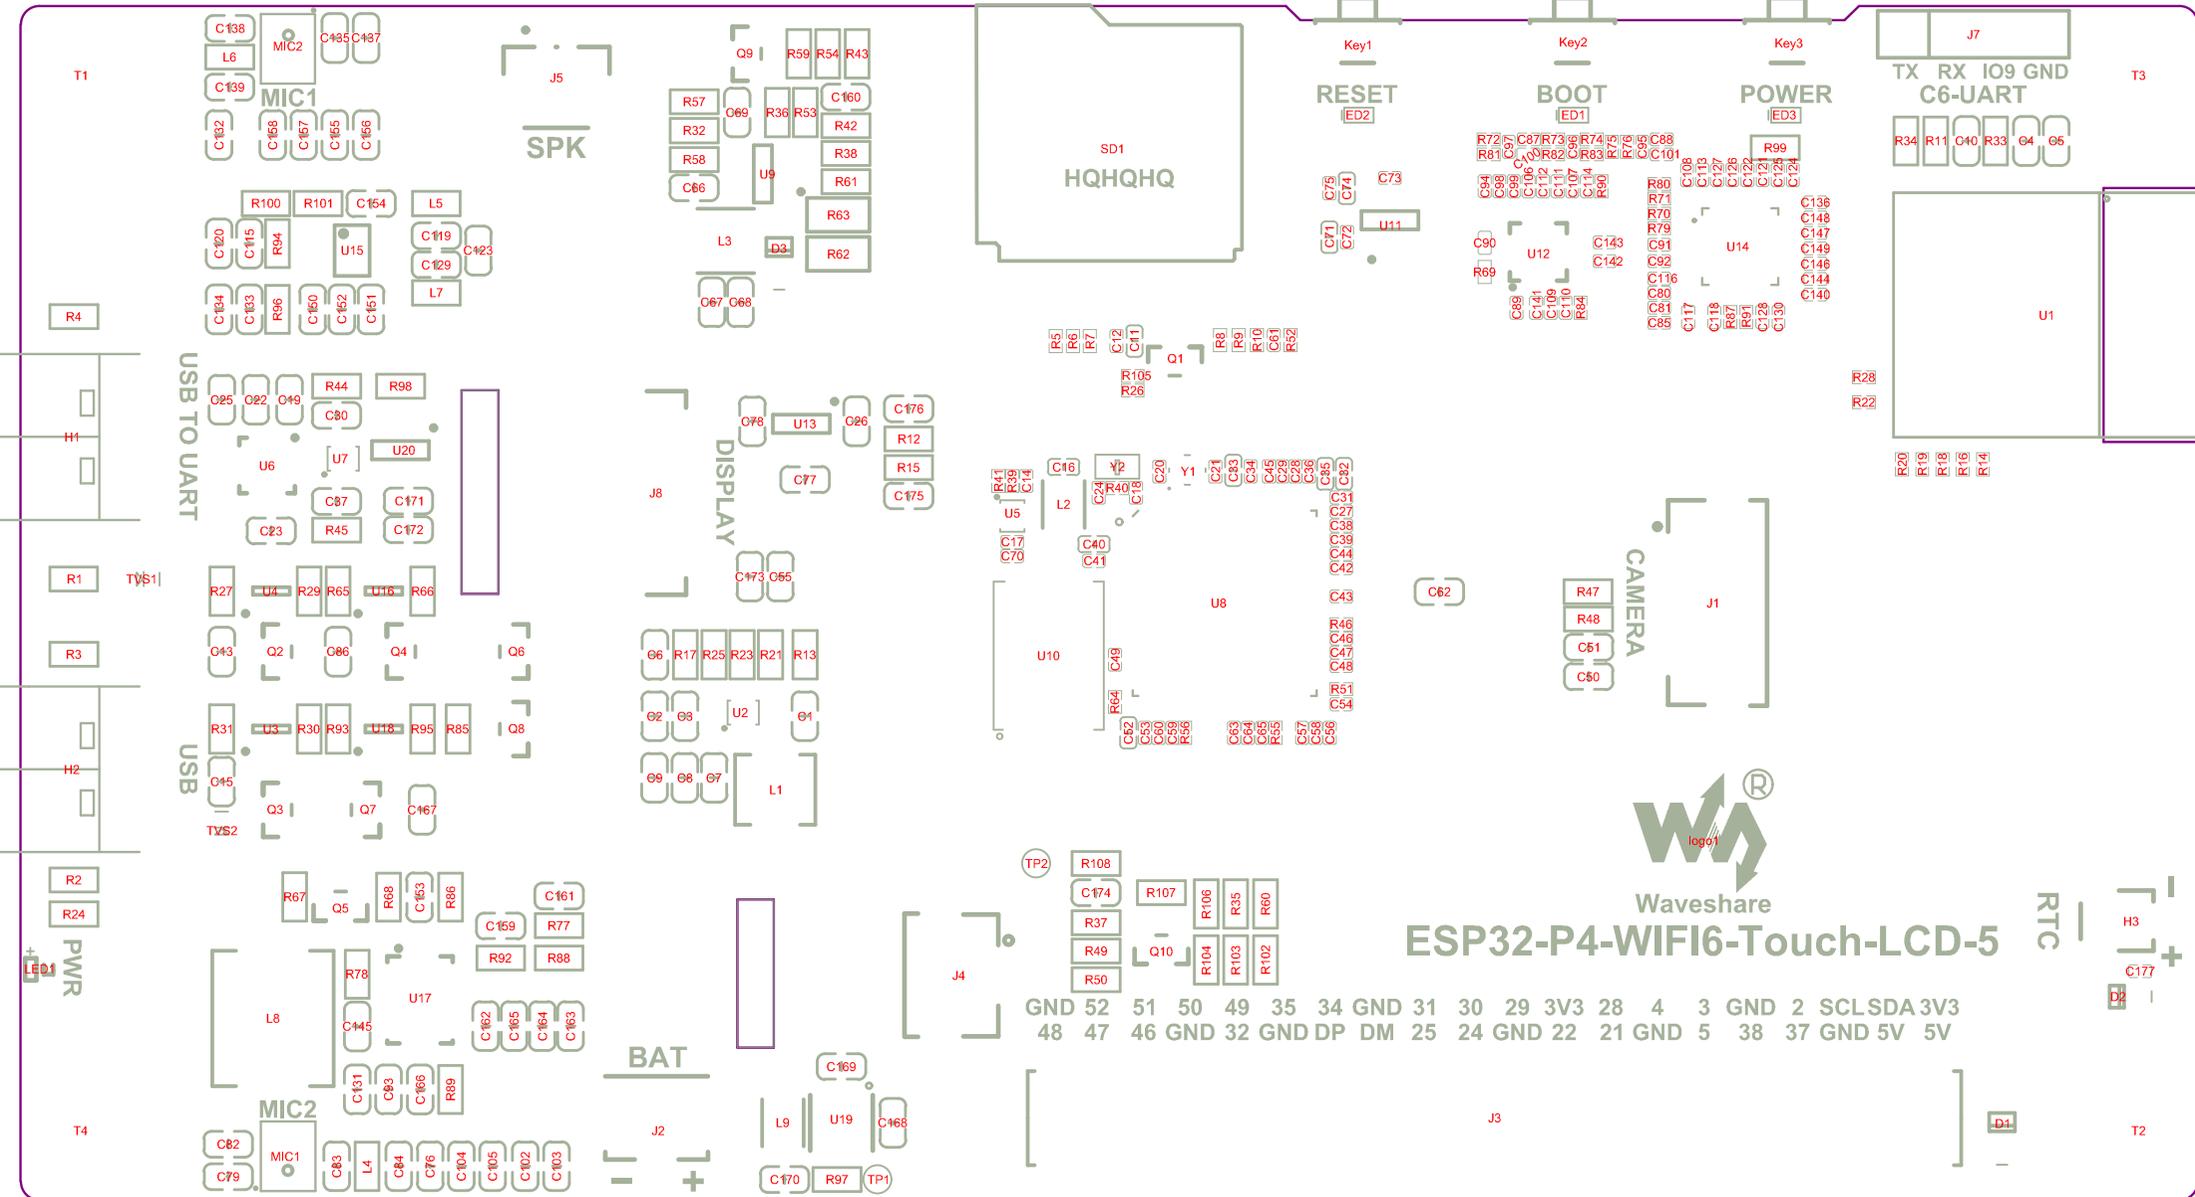



ESP32-P4-WIFI6-Touch-LCD-5

GND 52 51 50 49 35 34 GND 31 30 29 3V3 28 4 3 GND 2 SCLSDA 3V3
 48 47 46 GND 32 GND DP DM 25 24 GND 22 21 GND 5 38 37 GND 5V 5V

RTC
 H3
 D1
 C177

T2