



GPIO Pin List

GPIO	Function	IO Pin	Other
IO0			GPIO0
IO1	LCD SDA		
IO2	LCD SCK		
IO3	B2		
IO4	B1		BAT-ADC
IO5	B1		
IO6	BL PWM		
IO7	TP SCL		EXIO SCL, SCL
IO8	R5		
IO9	G5		
IO10	G4		
IO11	G3		
IO12	G2		
IO13	G1		
IO14	G0		
IO15	TP SDA		IMU SDA, RTC SDA, EXIO SDA, SDA
IO16	TP INT		
IO17	R4		
IO18	R4		
IO19			D N
IO20	B5		D P
IO21			
IO22			
IO23			Internal-occupancy
IO24			Internal-occupancy
IO25			Internal-occupancy
IO26			Internal-occupancy
IO27			Internal-occupancy
IO28			Internal-occupancy
IO29	HSYNC		
IO30	VSYNC		
IO31	DE		
IO32	PCLK		
IO33			
IO34			
IO35			
IO36			
IO37			
IO38			
IO39			
IO40			
IO41			
IO42			
IO43	ESP_TXD		UART_TXD, UART_RXD
IO44	ESP_RXD		UART_TXD, UART_RXD
IO45	B2		
IO46	R1		
IO47	B4		
IO48	B3		
IO49	LCD RST		
IO50	TP_RST		
IO51	LCD CS		
IO52			
IO53			
IO54			
IO55			
IO56			
IO57			
IO58			
IO59			
IO60			
IO61			
IO62			
IO63			
IO64			
IO65			
IO66			
IO67			
IO68			
IO69			
IO70			
IO71			
IO72			
IO73			
IO74			
IO75			
IO76			
IO77			
IO78			
IO79			
IO80			
IO81			
IO82			
IO83			
IO84			
IO85			
IO86			
IO87			
IO88			
IO89			
IO90			
IO91			
IO92			
IO93			
IO94			
IO95			
IO96			
IO97			
IO98			
IO99			
IO100			Internal-occupancy

