




Type-C Interface

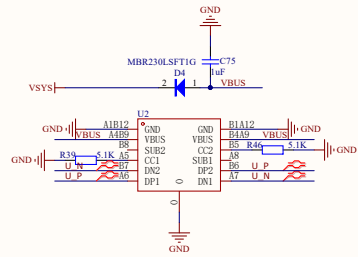


Power&ADC

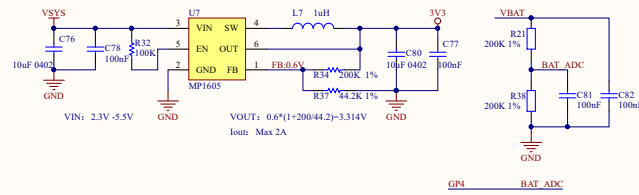


VBAT

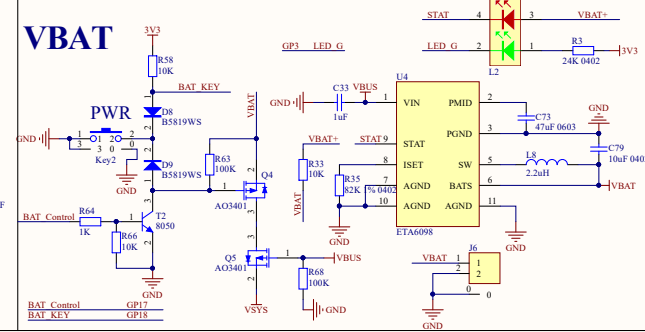


SD_Card

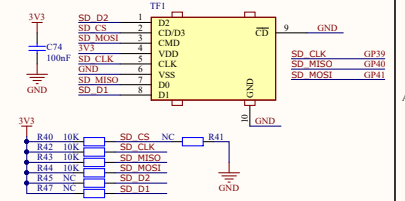


ESP32-S3FH4R2

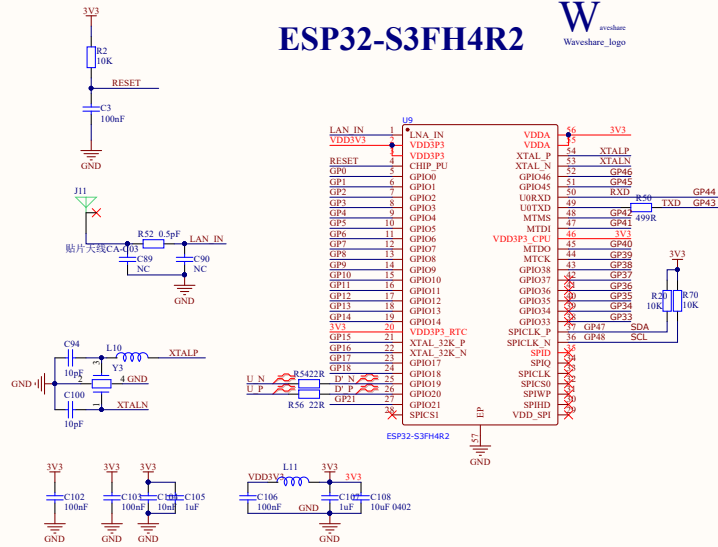

e-Paper&Touch

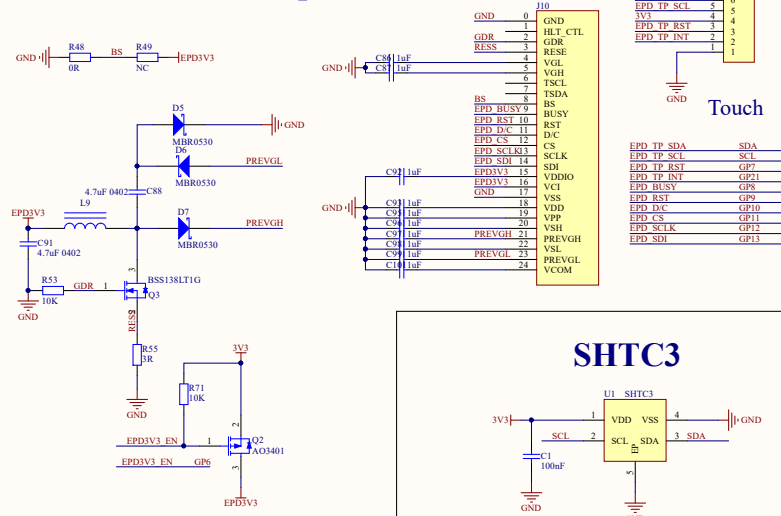


RTC

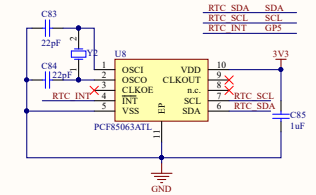


OUTPUT&KEY




SHTC3

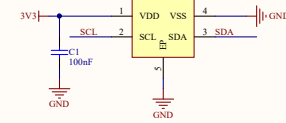

Codec

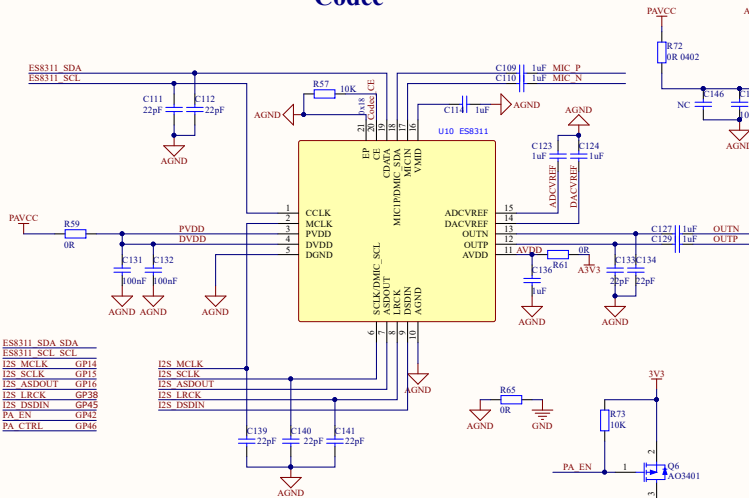

PA&SPEAKER&MIC

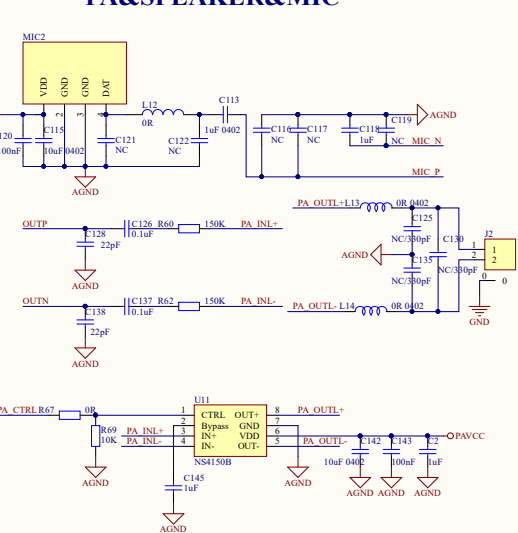

GPIO	e-Paper	SD Card	I2S	UART&USB	RTC	Other	OUTPUT
IO0						BOOT0	
IO1							IO1
IO2							IO2
IO3							IO3
IO4						BAT_ADC	
IO5					RTC_INT		
IO6	EPD_V3_EN						
IO7	EPD_TP_RST						
IO8	EPD_BUSY						
IO9	EPD_RST						
IO10	EPD_D/C						
IO11	EPD_CS						
IO12	EPD_SCLK						
IO13	EPD_SDI						
IO14			I2S_MCLK				
IO15			I2S_SCLK				
IO16			I2S_ASOUT				
IO17			I2S_LRCK				
IO18			I2S_DSDIN				
IO19				U_N			IO19
IO20				U_P			IO20
IO21	EPD_TP_INT						
IO38						BAT_Control	
IO39		SD_CLK					
IO40		SD_MISO					
IO41		SD_MOSI					
IO42			PA_EN			PA_EN	
IO43				TXD			IO43
IO44				RXD			IO44
IO45						BAT_KEY	
IO46			PA_CTRL			PA_CTRL	
IO47					RTC_SDA	SDA	IO47
IO48					RTC_SCL	SCL	IO48