

## PI4-CASE-4G-5G-M.2 Assembly Tutorial

If you want a shell, remove the four hexagonal copper pillars M2.5\*5+5 screws

如果要外壳的话，就将四个六角铜柱 M2.5\*5+5 螺丝去掉



Please install the SIM card, antenna and other accessories

请装好 SIM 卡和天线等配件



**First fix the hexagonal copper pillars to the 5G HAT**  
**先把六角铜柱固定在 5G HAT**



**Assemble the 5G HAT and Raspberry Pi, and then put the whole thing on the bottom shell**

**5G HAT 和 树莓派 组装好，然后一整个放到底部外壳上**



**Please cover the top of the shell**

**把外壳上盖盖好**



**Please tighten the screws around the shell and fix the**

shell

把外壳周围的螺丝锁上，固定好外壳



**Install the wall-mounted ears or rail buckles on the shell**

**给外壳装上壁挂耳朵或导轨扣子**



**Then install the USB connector and antenna**

**然后装上 USB 连接器和天线**





**This completes the installation**

**至此完成安装**