

RP2350-PiZero
Waveshare


Rev1.1

MICRO SD CARD

R21 R20 R18 R19

CLK GND DIO

HDMI1

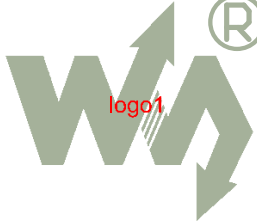

PIO-USB

BOOT

Key1

U4

Key2

RUN

USB

PWR

LED1

BAT

J3

J4

J2

J5

U3

U1

U2

D3

L2

L3

C28

C32

R36

C30

C31

R37

C39

R38

C23

C25

C22

R24

C16

C15

C17

R33

R25

R26

C11

C10

C24

C13

C18

C14

R1

R2

R3

R4

R6

R7

R10

R12

C12

C19

C9

C26

R35

C27

C8

R29

R30

R22

R8

R9

R23

R17

R14

C3

R16

R15

Y1

D2

H1

C33

R39

R28

R34

C7

C20

R27

C21

L1

D4