 




TYPE-C




FLASH

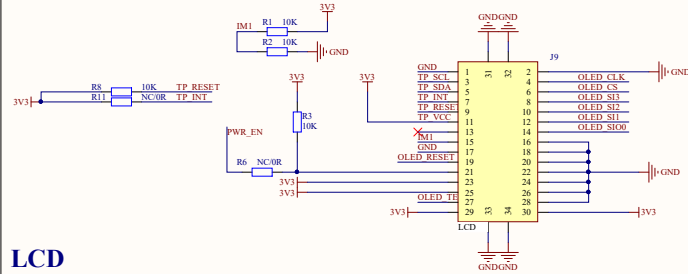

LCD

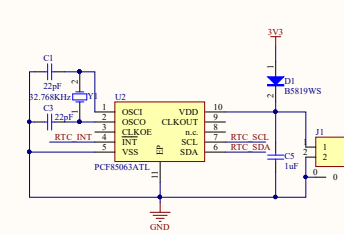


RTC

 


XTAL


GPIO	LCD	UART	RTC	SD_Card	IMU	BAT	Other
GPIO0		TXD					TXD
GPIO1		RXD					RXD
GPIO2							GPIO2
GPIO3					IMU INT2		
GPIO4	TP_INT						
GPIO5	TP_RESET						
GPIO6	TP_SDA		RTC_SDA		IMU_SDA		SDA
GPIO7	TP_SCL		RTC_SCL		IMU_SCL		SCL
GPIO8			RTC_INT		IMU_INT1		
GPIO9	OLED_CS						
GPIO10	OLED_CLK						
GPIO11	OLED_SIO0						
GPIO12	OLED_SIO1						
GPIO13	OLED_SIO2						
GPIO14	OLED_SIO3						
GPIO15	OLED_RESET						
GPIO16	OLED_TE						
GPIO17	PWR_EN						
GPIO18				SD_SCLK			
GPIO19				SD_MOSI			
GPIO20				SD_MISO			
GPIO21				SDIO_D1			
GPIO22				SDIO_D2			
GPIO23				SD_CS			
GPIO24						KEY_BAT	
GPIO25						BAT_Control	
GPIO26							GPIO26
GPIO27							GPIO27
GPIO28							GPIO28
GPIO29							GPIO29
GPIO30							GPIO30
GPIO31							GPIO31
GPIO32							GPIO32
GPIO33							GPIO33
GPIO34							GPIO34
GPIO35							GPIO35
GPIO36							GPIO36
GPIO37							GPIO37
GPIO38							GPIO38
GPIO39							GPIO39
GPIO40						BAT_ADC	
GPIO41							GPIO41
GPIO42							GPIO42
GPIO43							GPIO43
GPIO44							GPIO44
GPIO45							GPIO45
GPIO46							GPIO46
GPIO47							GPIO47

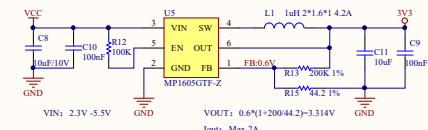


POWER

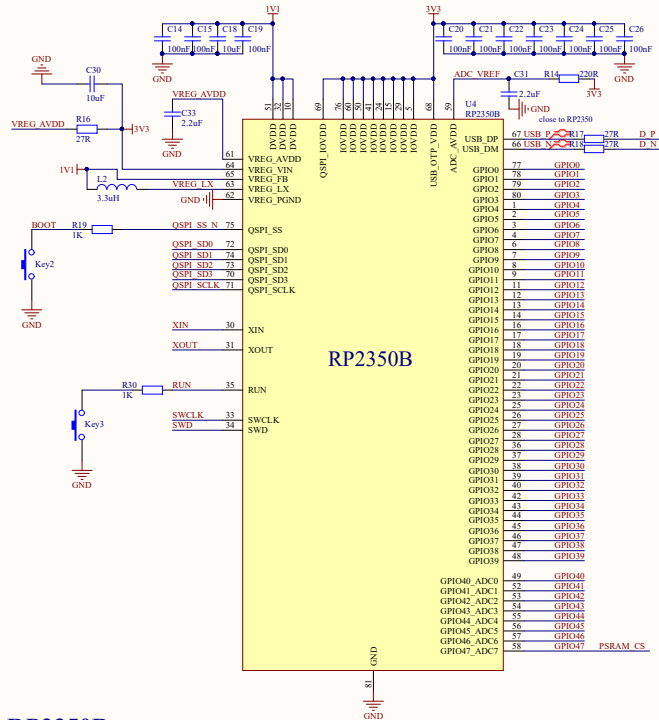


RP2350B

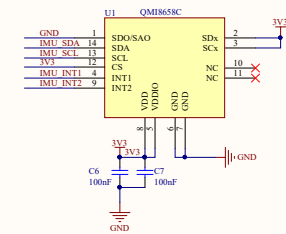


IMU

 



INTERFACE

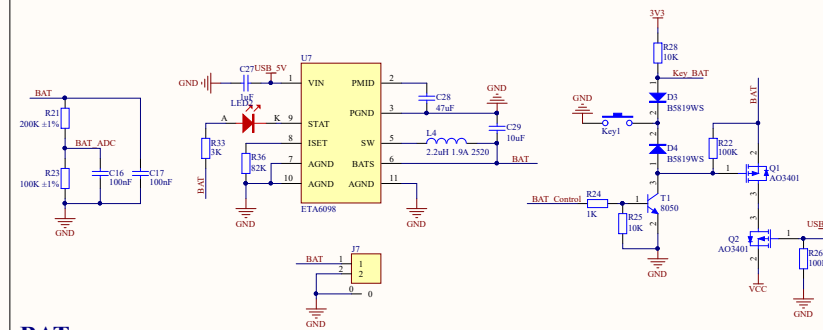


BAT

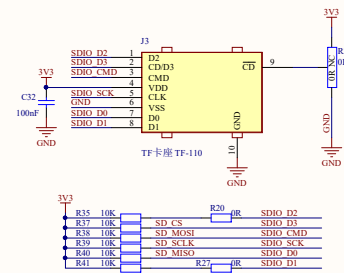


SD_CARD

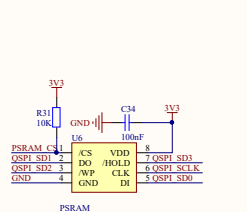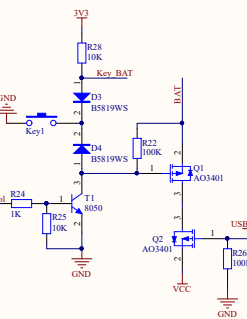

PSRAM

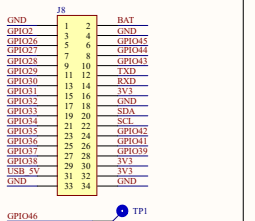

GPIO

 

RP2350-Touch-AMOLED-2.41

RP2350B