




Type-C Interface

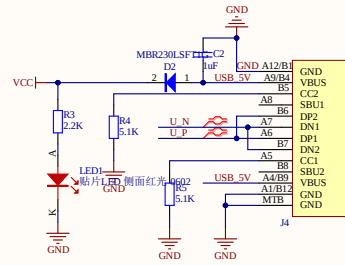


POWER

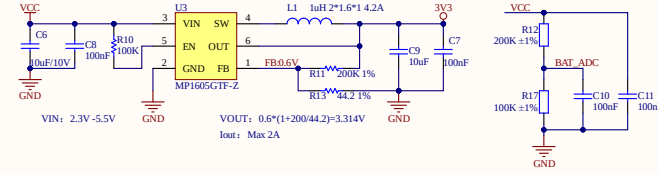


BAT

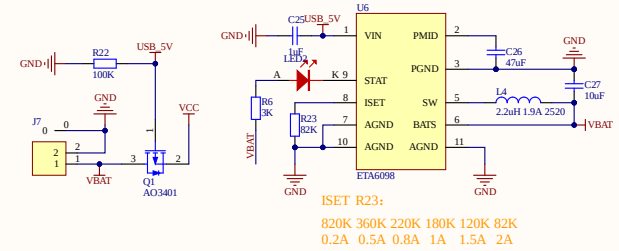


RTC

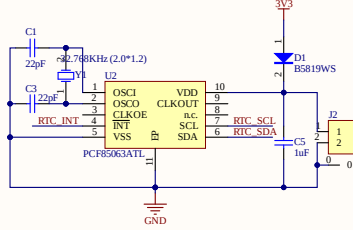


FLASH




QMI

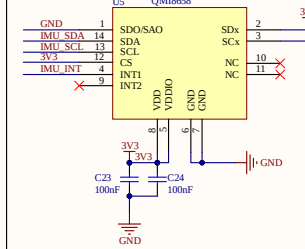


Display

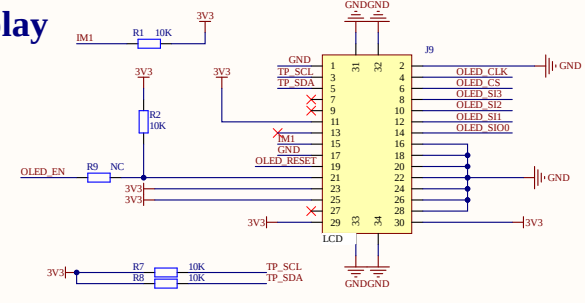

MCU

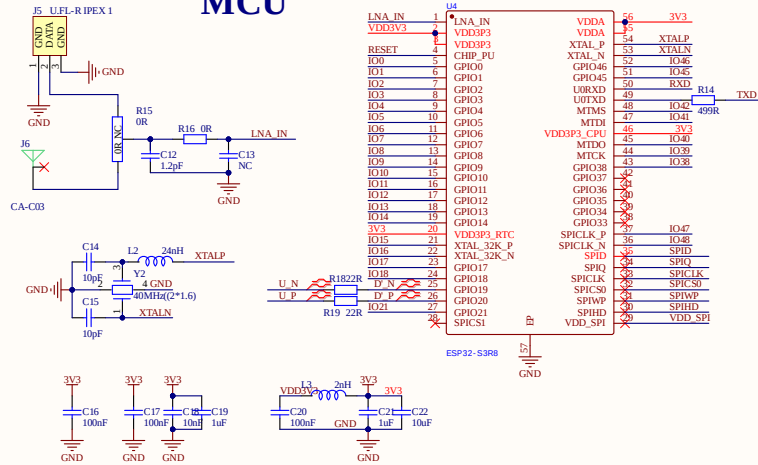


KEY

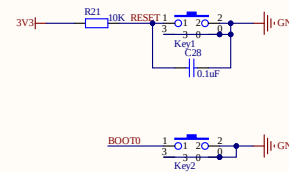


W
avesense
ESP32-S3-Touch-AMOLED-1.43

SD Card

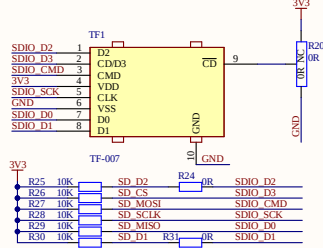

OUTPUT

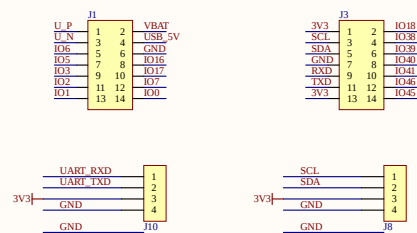

GPIO	AMOLED	SD Card	IMU	RTC	UART	I2C	KEY_IO	Other
IO0							BOOT0	IO0
IO1								IO1
IO2								IO2
IO3								IO3
IO4								BAT_ADC
IO5								IO5
IO6								IO6
IO7								IO7
IO8			IMU_INT					
IO9	OLED_CS							
IO10	OLED_CLK							
IO11	OLED_SIO0							
IO12	OLED_SIO1							
IO13	OLED_SIO2							
IO14	OLED_SIO3							
IO15				RTC_INT				
IO16								IO16
IO17								IO17
IO18								IO18
IO19								U_N
IO20								U_P
IO21	OLED_RESET							
IO22								
IO23								
IO24								
IO25								
IO26								
IO27								
IO28		SD_CS						IO28
IO29		SD_MOSI						IO29
IO30		SD_MISO						IO30
IO31		SD_CLK						IO31
IO32								
IO33								
IO34								
IO35								
IO36								
IO37								
IO38								
IO39								
IO40								
IO41								
IO42	OLED_EN							
IO43								
IO44								
IO45								
IO46								
IO47	TP_SDA		IMU_SDA	RTC_SDA		SDA		SDA
IO48	TP_SCL		IMU_SCL	RTC_SCL		SCL		SCL
EN							RESET	