



SIM82XX_SIM83XX Series _GNSS_Application Note

5G Module

SIMCom Wireless Solutions Limited

SIMCom Headquarters Building, Building 3, No. 289
Linhong Road, Changning District, Shanghai P.R. China

Tel: 86-21-31575100
support@simcom.com
www.simcom.com

Document Title:	SIM82XX_SIM83XX Series_GNSS_Application Note
Version:	1.00
Date:	2021.11.25
Status:	Released

GENERAL NOTES

SIMCOM OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS, TO SUPPORT APPLICATION AND ENGINEERING EFFORTS THAT USE THE PRODUCTS DESIGNED BY SIMCOM. THE INFORMATION PROVIDED IS BASED UPON REQUIREMENTS SPECIFICALLY PROVIDED TO SIMCOM BY THE CUSTOMERS. SIMCOM HAS NOT UNDERTAKEN ANY INDEPENDENT SEARCH FOR ADDITIONAL RELEVANT INFORMATION, INCLUDING ANY INFORMATION THAT MAY BE IN THE CUSTOMER'S POSSESSION. FURTHERMORE, SYSTEM VALIDATION OF THIS PRODUCT DESIGNED BY SIMCOM WITHIN A LARGER ELECTRONIC SYSTEM REMAINS THE RESPONSIBILITY OF THE CUSTOMER OR THE CUSTOMER'S SYSTEM INTEGRATOR. ALL SPECIFICATIONS SUPPLIED HEREIN ARE SUBJECT TO CHANGE.

COPYRIGHT

THIS DOCUMENT CONTAINS PROPRIETARY TECHNICAL INFORMATION WHICH IS THE PROPERTY OF SIMCOM WIRELESS SOLUTIONS LIMITED COPYING, TO OTHERS AND USING THIS DOCUMENT, ARE FORBIDDEN WITHOUT EXPRESS AUTHORITY BY SIMCOM. OFFENDERS ARE LIABLE TO THE PAYMENT OF INDEMNIFICATIONS. ALL RIGHTS RESERVED BY SIMCOM IN THE PROPRIETARY TECHNICAL INFORMATION, INCLUDING BUT NOT LIMITED TO REGISTRATION GRANTING OF A PATENT, A UTILITY MODEL OR DESIGN. ALL SPECIFICATION SUPPLIED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.

SIMCom Wireless Solutions Limited

SIMCom Headquarters Building, Building 3, No. 289 Linhong Road, Changning District, Shanghai P.R. China

Tel: +86 21 31575100

Email: simcom@simcom.com

For more information, please visit:

<https://www.simcom.com/download/list-863-en.html>

For technical support, or to report documentation errors, please visit:

<https://www.simcom.com/ask/> or email to: support@simcom.com

Copyright © 2021 SIMCom Wireless Solutions Limited All Rights Reserved.

About Document

Version History

Version	Date	Author	What is new
V1.00	2021.11.25	Yunchun.He	New version

Scope

This document applies to the SIMCom SIM820X series, SIM821X series, SIM826X series and SIM83XX series.

Contents

About Document.....	3
Version History.....	3
Scope.....	3
Contents.....	4
1 Introduction.....	6
1.1 Overview.....	6
1.2 GNSS Mode Introduction.....	6
1.3 gpsOneXTRA Introduction.....	7
1.3.1 gpsOneXTRA assistance.....	7
1.3.2 gpsOneXTRA assistance data file content.....	7
1.3.3 gpsOneXTRA assistance data delivery.....	8
1.3.4 gpsOneXTRA assistance file source and policy.....	8
1.4 References.....	8
2 A-GNSS Quick Start – Setting.....	9
2.1 Set A-GNSS Server Address.....	9
2.2 Set Certificate.....	9
3 Start GNSS.....	10
3.1 Start GNSS Standalone Mode.....	10
3.2 Start A-GNSS Mode.....	10
3.2.1 AGNSS server which does not support certificate.....	10
3.2.2 AGNSS server which supports certificate.....	11
4 Get GNSS Position Information.....	13
4.1 Standalone Mode.....	13
4.2 A-GNSS Mode.....	13
5 Qualcomm gpsOneXTRA Mode.....	14
5.1 gpsOneXTRA Execute Flow.....	14
5.2 gpsOneXTRA AT Flow.....	14
6 Satellite.....	16

7 Q&A.....17

SIMCom
Confidential

1 Introduction

1.1 Overview

Customer can get useful information about SIM82XX/SIM83XX GNSS/A-GNSS/XTRA functions quickly through this document.

GNSS function could be easily realized by AT command interface provided in SIM82XX/SIM83XX module via USB interface.

SIM82XX/SIM83XX GNSS features:

- Support GPS, GLONASS, BEIDOU, GALILEO, QZSS and NAVIC satellite system.
- Support standalone mode, MS-based ,MS-assisted and XTRA mode
- Support cold start and hot start.
- Support a subset of the NMEA-0183 standard.
- Support NMEA sentences output in NMEA port.
- A-GNSS supports UP (user plane) and CP (control plane) method.
- MS-assisted mode supports single fixed; MS-based mode supports seriate fixed.
- Support certificate if necessary.
- Supporting GNSS starts automatically when module powers on, it supports standalone mode only.

1.2 GNSS Mode Introduction

In MS-assisted mode, when a request for position location is issued, available network information is provided to the location server and assistance is requested from the location server. The location server sends the assistance information to the handset. The handset/mobile unit measures the GNSS observables and provides the GNSS measurements along with available network data (that is appropriate for the given air interface technology) to the location server. The location server then calculates the position location and returns results to the requesting entity.

In MS-based mode, the assistant data provided by the location server encompasses not only the information required to assist the handset in measuring the satellite signals, but also the information required to calculate the handset's position. Therefore, rather than providing the GNSS measurements and available network data back to the location server, the mobile calculates the location on the handset and

passes the result to the requesting entity.

In standalone mode, the handset demodulates the data directly from the GNSS satellites. This mode has some reduced cold-start sensitivity, and a longer time to first fix as compared to the assisted modes. However, it requires no server interaction and works out of network coverage. Default use GPS, GLONSS, BEIDOU, can use AT+CGNSSMODE set.

MS-assisted	Server	Module
Location server sends aiding data that is valid for the current fix	Send aiding data	
Module sends code phases		Code phases
Server calculates position	Calculate position	
MS-assisted	Server	Module
Location server sends aiding data that is valid for the current fix	Send aiding data	
Module calculates position		Calculate position
MS-assisted	Server	Module
Module demodulates data from GNSS satellite		Demodulates GNSS and GLONASS satellite data
Module calculates position		Calculate position

Table 1 GNSS mode of operation

1.3 gpsOneXTRA Introduction

1.3.1 gpsOneXTRA assistance

It provides enhanced standalone performance, and eliminates the need to demodulate the GNSS signal for ephemeris, almanac, iono, UTC, or health.

Normally requires -144 dBm or stronger for all SVs in view

TTFF can be reduced by 18 to 30 sec (or more in harsh signal environments)

1.3.2 gpsOneXTRA assistance data file content

Current assistance data (ephemeris, almanac, iono, UTC, health)

Predict satellite coordinates and clock biases valid for up to 7 days

1.3.3 gpsOneXTRA assistance data delivery

Propriety binary file (approximately 40 kB, depending on number of active satellites)

File transfer via HTTP

Time assistance via SNTP/HTP

Ensure AP-Linux has access to the Internet.

1.3.4 gpsOneXTRA assistance file source and policy

Qualcomm generated the assistance file and Qualcomm partner hosted.

1.4 References

The present document is based on the following documents:

SIM82XX_SIM83XX Series_AT Command Manual_VX.xx.doc

2 A-GNSS Quick Start – Setting

The purpose of this section is to help to get start with A-GNSS setting.

2.1 Set A-GNSS Server Address

UP method is through PS region, so customer must set A-GNSS server and PDP context profile. The server address is provided by local carrier.

- Set the PDP context profile method:

```
AT+CGDCONT=1,"IP","myAPN"
```

The first parameter is the profile number of CGSOCKCONT, and "IP" is the protocol stack type that MMS will use. "myAPN" is the ASN that will be used for PDP activation, this parameter should be set to the real APN string set by the carrier. Following is the PDP context profile and server URL setting example:

- Set the A-GNSS server method:

```
AT+CGPSURL="111.222.333.444:8888"
```

2.2 Set Certificate

If the GNSS server requires certificate, customer must select security mode, and input the certificate. The certificate must be imported into EFS by PC tool.

- Select the transport security:

```
AT+CGPSSSL=1
```

The certificate is provided by local carrier.

3 Start GNSS

3.1 Start GNSS Standalone Mode

Three methods can start GNSS standalone mode:

```
AT+CGPS=1,1 (or AT+CGPS=1)
AT+CGPSCOLD
AT+CGPSHOT
```

These commands must be executed after GNSS engine switched off.

3.2 Start A-GNSS Mode

When using MS-based mode, mode will transform to standalone mode automatically after getting the ephemeris information from the server. MS-assisted mode is single fixed; MS-based mode is serial fixed.

3.2.1 AGNSS server which does not support certificate

MS-assisted	no certificate
Set APN	AT+CGDCONT=1,"IP","myAPN"
Set server address	AT+CGPSURL="111.222.333.444:8888"
Set security mode	AT+CGPSSSL=0
Start GNSS	AT+CGPS=1,3
AT port response	+CAGPSINFO: 3122256517,12135328531,135,15052009,012749.0 \$GPGSV,3,1,10,02,22,135,26,08,11,045,23,09,11,180,22,1 0,33,056,22*71
NMEA port response	\$GPGSV,3,2,10,15,78,281,44,21,22,315,41,24,67,315,47,2 6,45,225,30*78 \$GPGSV,3,3,10,27,33,157,,29,22,247,46*76
MS-based mode	no certificate
Set APN	AT+CGDCONT=1,"IP","myAPN"

Set server address	AT+CGPSURL="111.222.333.444:8888"
Set security mode	AT+CGPSSSL=0
Start GNSS	AT+CGPS=1,2
AT command(get fixed position)	AT+CGPSINFO
AT port response	+CGPSINFO: 3113.393766,N,12121.176625,E,061108,075358.0,19.5,0,0 \$GPGSV,3,1,11,02,19,142,20,08,16,045,21,09,19,180,22,1 0,41,063,29*7B \$GPGSV,3,2,11,15,77,317,46,18,09,286,31,21,28,315,43,2 4,73,310,47*7F \$GPGSV,3,3,11,26,53,241,31,27,39,158,20,29,30,250,41*4 5
NMEA port response	\$GPGGA,013925.0,3113.340070,N,12121.176208,E,1,08,2 .9,164.0,M,,,*08 \$GPRMC,013925.0,A,3113.340070,N,12121.176208,E,,15 0509,,A*61 \$GPGSA,A,3,08,10,15,18,21,24,26,29,,,,,4.4,2.9,3.3*37 \$GPVTG,,T,,M,0.0,N,0.0,K*4E

3.2.2 AGNSS server which supports certificate

MS-assisted	use certificate
Import certificate	By PC tool
Set APN	AT+CGDCONT=1,"IP","myAPN"
Set server address	AT+CGPSURL="111.222.333.444:8888"
Set security mode	AT+CGPSSSL=1
Start GNSS	AT+CGPS=1,3
AT port response	+CAGPSINFO: 3122256517,12135328531,135,15052009,012749.0 \$GPGSV,3,1,10,02,22,135,26,08,11,045,23,09,11,180,22,1 0,33,056,22*71 \$GPGSV,3,2,10,15,78,281,44,21,22,315,41,24,67,315,47,2 6,45,225,30*78 \$GPGSV,3,3,10,27,33,157,,29,22,247,46*76
NMEA port response	
MS-based mode	use certificate
Import certificate	By PC tool
Set APN	AT+CGDCONT=1,"IP","myAPN"
Set server address	AT+CGPSURL="111.222.333.444:8888"

Set security mode	AT+CGPSSSL=1
Start GNSS	AT+CGPS=1,2
AT command(get fixed position)	AT+CGPSINFO
AT port response	+CGPSINFO: 3113.393766,N,12121.176625,E,061108,075358.0,19.5,0,0
NMEA port response	\$GPGSV,3,1,11,02,19,142,20,08,16,045,21,09,19,180,22,1 0,41,063,29*7B
	\$GPGSV,3,2,11,15,77,317,46,18,09,286,31,21,28,315,43,2 4,73,310,47*7F
	\$GPGSV,3,3,11,26,53,241,31,27,39,158,20,29,30,250,41*4 5
	\$GPGGA,013925.0,3113.340070,N,12121.176208,E,1,08,2 .9,164.0,M,,,*08
	\$GPRMC,013925.0,A,3113.340070,N,12121.176208,E,,15 0509,,A*61
\$GPGSA,A,3,08,10,15,18,21,24,26,29,,,,,4.4,2.9,3.3*37	
\$GPVTG,,T,,M,0.0,N,0.0,K*4E	

SIMCom
Confidential

4 Get GNSS Position Information

4.1 Standalone Mode

Command AT+CGPSINFO will return fixed position; also it can report GNSS position string automatically by configured with AT command.

The report format:

```
+CGPSINFO: 3113.393766,N,12121.176625,E,061108,075358.0,19.5,0,0
```

4.2 A-GNSS Mode

If MS-based mode is enabled, fixed position information is like standalone mode.


If MS-assisted mode is enabled, GNSS position string will report automatically.

The report format is as following:

```
+CAGPSINFO: 3122256517,12135328531,135,15052009,012749.0
```

5 Qualcomm gpsOneXTRA Mode

5.1 gpsOneXTRA Execute Flow

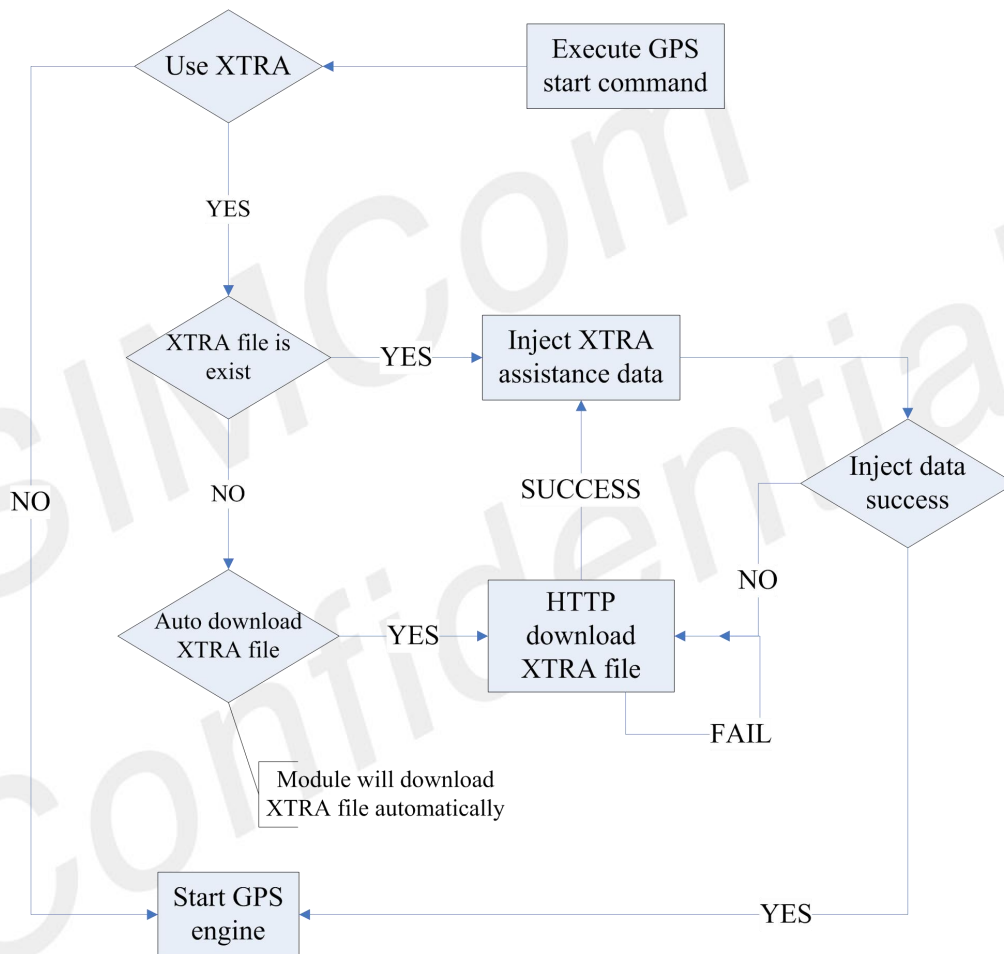

5.2 gpsOneXTRA AT Flow

- (1) Enable the gpsoneXTRA function. Execute AT+CGPSXE=1, then restart the module. (This function will take effect after module restart).
- (2) Ensure AP-Linux has access to the Internet.
- (3) Download the XTRA assistance file form HTTP server. Execute AT+CGPSXD=0. Module will report +CGPSXD: 0 if download successfully. Or set AT+CGPSXDAUTO=1 to auto download xtrafile.
- (4) Start GNSS AT+CGPSCOLD

Example:

First ensure AP-Linux has access to the Internet.

AT+CGPSXE=1

OK

AT+CGPSXD=0

OK

+CGPSXD: 0

AT+CGPSCOLD

OK

AT+CGPSINFO

OK

+CGPSINFO: 3122256517,12135328531,135,15052009,012749.0

NOTE

The XTRA assistance file can be used for about 7 days. But suggest customer updates this file daily.
If hot-start, XTRA may not take effect

6 Satellite

SIM82XX/SIM83XX support GPS, GLONASS, BEIDOU, Galileo, QZSS and NAVIC.
Default open GPS+GLONASS+BEIDOU, you can use AT Command set it.

```
AT+CGNSSMODE
```

SIMCom
Confidential

7 Q&A

Some answers to frequently asked questions may be helpful for using GNSS.

Why GNSS does not start?

Please execute AT+CGPSCOLD, AT+CGPSHOT or AT+CGPS=1 to start GNSS. If customers want to start GNSS automatically when powered on the module, they can set AT+CGPSAUTO=1.

Why can we not get NMEA sentence?

1. Make sure GNSS is running.
2. Check current opened port is NMEA port.
3. Check AT+CGPSNMEA setting is correct.

Why A-GNSS does not get the fixed position?

1. Make sure all the setting is correct. Re. A-GNSS quick start setting.
2. Make sure AGNSS server address is available.
3. Has the module registered for the network?

Why standalone mode cannot fix?

1. Is GNSS antenna connected normally?
2. Is there existing GNSS signal? If indoor or no GNSS signal, standalone mode cannot fix.

How to get fixed position information?

1. AT+CGPSINFO command should get position information after fixed. It is URC information.
2. Parse NMEA sentence \$GPGGA or \$GPRMC.
3. If use MS-assisted, fixed position information will report automatically after it is fixed.

Why module cannot download XTRA file by HTTP?

1. ensure AP-Linux has access to the Internet.

How to disable or enable the XTRA function?

1. Setting by AT+CGPSXE=<on/off>, the parameter 0 means disable and 1 means enable. Module must be restarted after setting.

Can XTRA enhance the TTF?

1. Yes, TTF can be reduced by 18 to 30 sec (or more in harsh signal environments) for standalone cold start.

Which setting is necessary for XTRA?

1. ensure AP-Linux has access to the Internet.

If http is used for XTRA download, can it be used for another http connection?

1. XTRA download use AP-Linux network.